

Sun Special®

Qualidade e Tecnologia


PEÇAS

MÁQUINA DE COSTURA INDUSTRIAL
GALONEIRA PLANA ELETRÔNICA

SS5500D-01CB-UT-ET-1364PR-SU

www.sunspecial.com.br

2.1 机壳结构 (A) MACHINE BED FRAME (A)

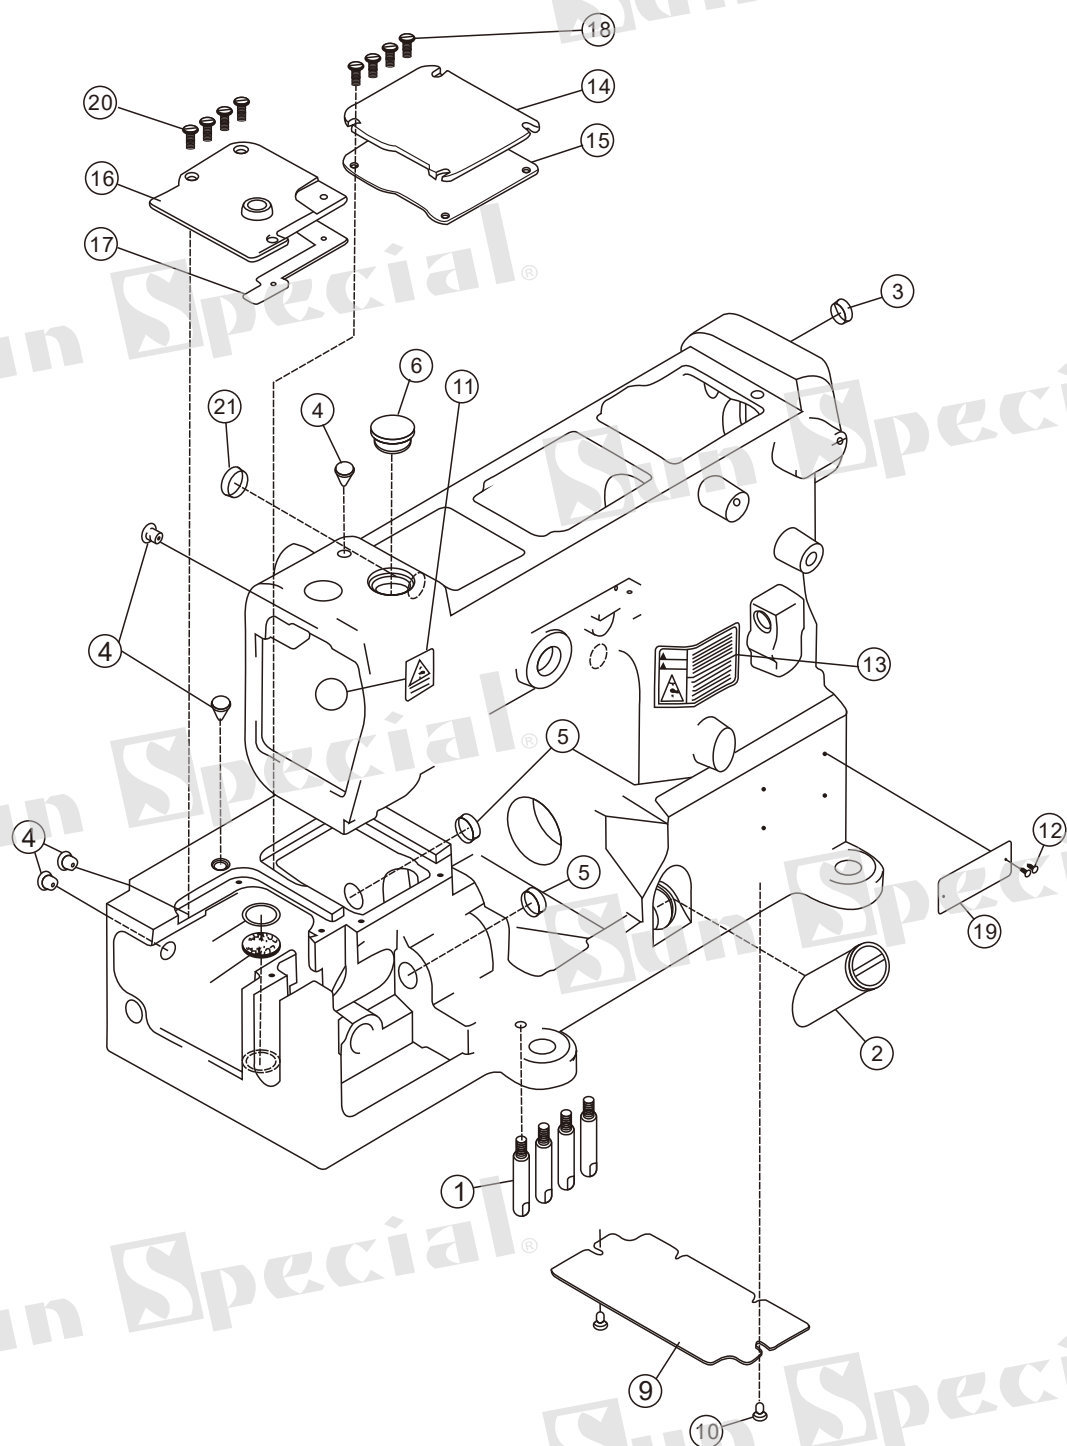


2.1 机壳结构(A) MACHINE BED FRAME(A)

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION		数量 QTY	
				562A	562A-BD
1	250117	机座螺钉	BED PIN	4	4
2	206500	油量指示窗	OIL LEVEL GAUGE	1	1
3	240228	抬压轴后油塞	PLUG	1	1
4	240052	机头油塞	PLUG	5	5
5	208173	橡胶塞	PLUG	2	2
6	240110	橡胶塞	PLUG	1	1
7	240001	Φ18 挡圈	RING	3	3
8	255002	滤油网	FILTER	3	3
9	250020	底盖板	COVER	1	1
10	7017A	底盖板螺钉	SCREW	2	2
11	9A3048	三角形标贴	CAUTION LABEL	1	1
12	F20-1	2×5 铆钉	PIN	2	2
13	F20-2	机头安全提示牌	STICKER	1	1
14	250003	弯针传动盖板	TOP COVETR PLATE (RIGHT)	1	1
15	250004	弯针传动盖板垫	GASKET	1	1
16	250069	针距按钮盖	TOP COVETR PLATE (LEFT)	1	1
17	250049	针距按钮盖密封垫	GASKET	1	1
18	7084	弯针传动盖板螺钉	SCREW	4	4
19	250369	型号牌☆	MMODEL CARD☆	1	1
20	7084	针距按钮盖螺钉	SCREW	4	4
21	208173	油封	OIL SEAL	1	1

3


2.2 机壳结构 (B) MACHINE BED FRAME (B)

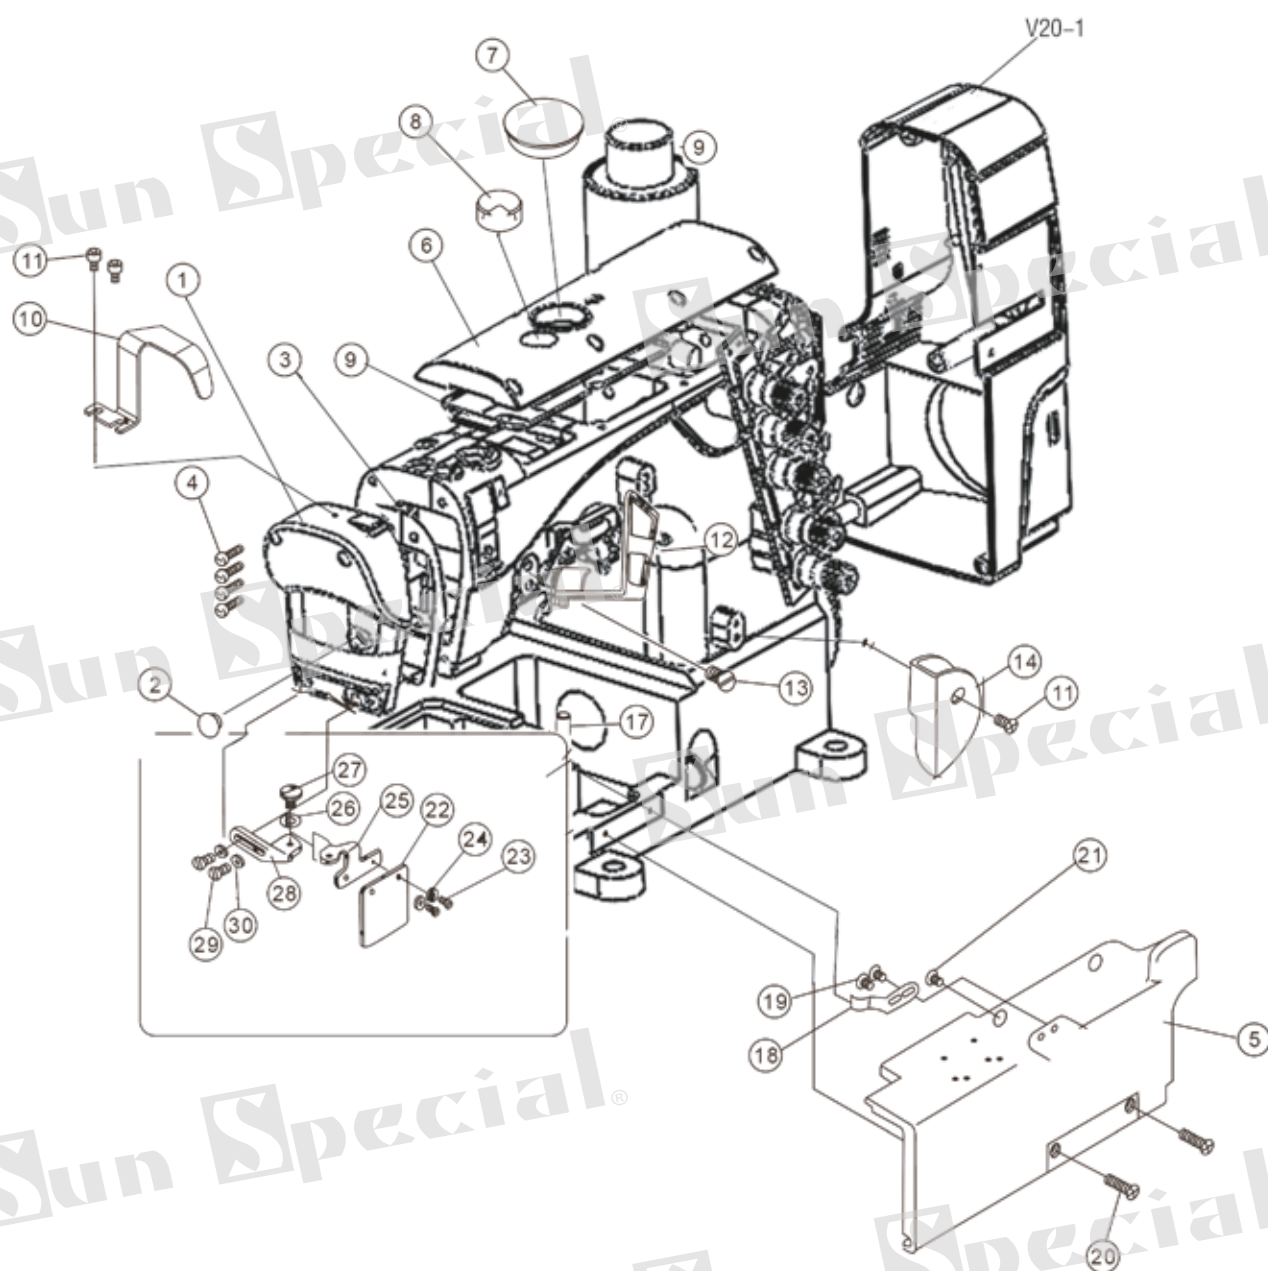

2.2 机壳结构(B) MACHINE BED FRAME(B)

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	F20-1	面板☆	1	1
2	5242	橡胶塞	1	1
3	F20-2	面板密封垫	1	1
4	7021A	面板螺钉	11	11
5	F20-3	穿线罩板	1	0
6	F20-4	上盖板	1	1
7	240226	上盖闷头	1	1
8	179107-05	喷油窗	1	1
9	F20-5	上盖板垫	1	1
10	250021-UD	挑线杆防护罩	1	1
11	7019-A	挑线杆防护罩螺钉	3	3
12	250023	过线防护罩	1	1
13	7052	螺钉	1	1
14	250005-TD	底过线导板	1	1
17	7089	底线过线连接柱	1	1
18	250051	穿线罩弹簧	1	1
19	7018A	螺钉	2	2
20	7023	穿线罩板铰链螺钉	2	2
21	210025	防震垫	1	1
22	250257	防护罩	1	1
23	7009	防护罩螺钉	2	2
24	202875	防护罩垫圈	2	2
25	250256	防护罩支架	1	1
26	210307	垫圈	1	1
27	7066	螺钉	1	1
28	250255	防护罩座	1	1
29	7020A	螺钉	2	2
30	303448	垫圈	2	2


2.3 机壳结构(C) MACHINE BED FRAME (C)

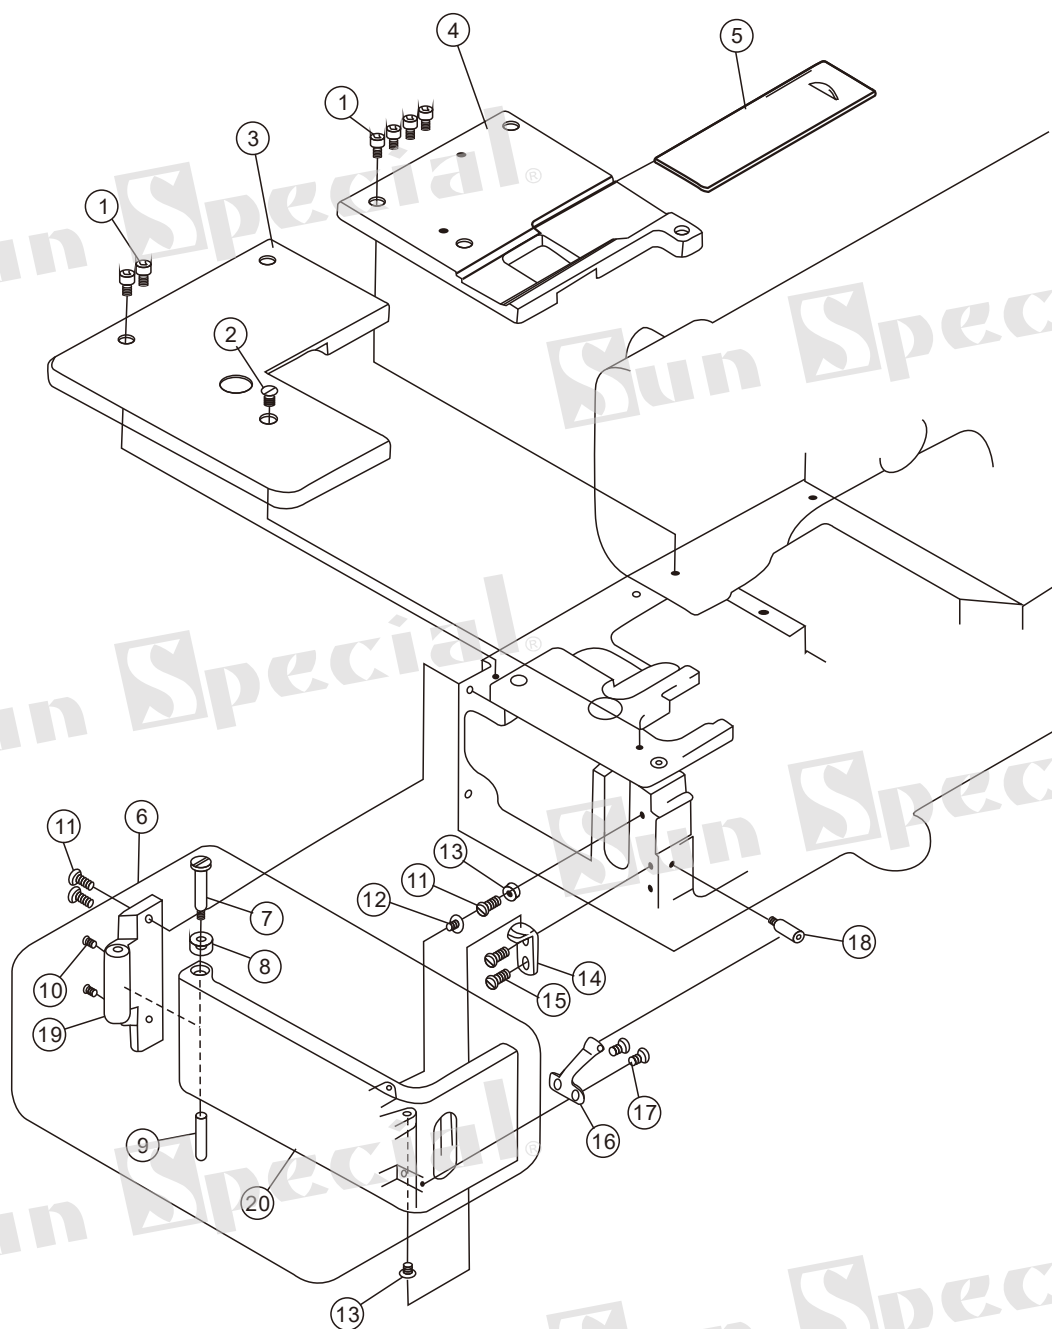

2.3 机壳结构(C) MACHINE BED FRAME(C)

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	7021	螺钉	6	6
2	7021A	缝台左罩定位螺钉	1	1
3		缝台左罩	1	1
4		缝台右罩	1	1
5	250071-91	推板组件	1	1
6	250039-PD	左侧罩组件	1	1
7	250037-PD	螺钉	1	1
8	201191	垫圈	4	4
9	250036	左侧罩铰链销轴	1	1
10	4535	铰链上头螺钉	2	2
11	7020A	螺钉	3	3
12	210025	防震塞	2	2
13	4821	螺母	1	1
14	250047	防震板	1	1
15	7019A	螺钉	2	2
16	206023	前罩板弹簧	1	1
17	7018A	螺钉	2	2
18	7089	螺钉	1	1
19	250036	左侧板铰链板	1	1
20	250036	左罩板	1	1


2.4 下轴传动机构 CRANK SHAFT DRIVE MECHANISM

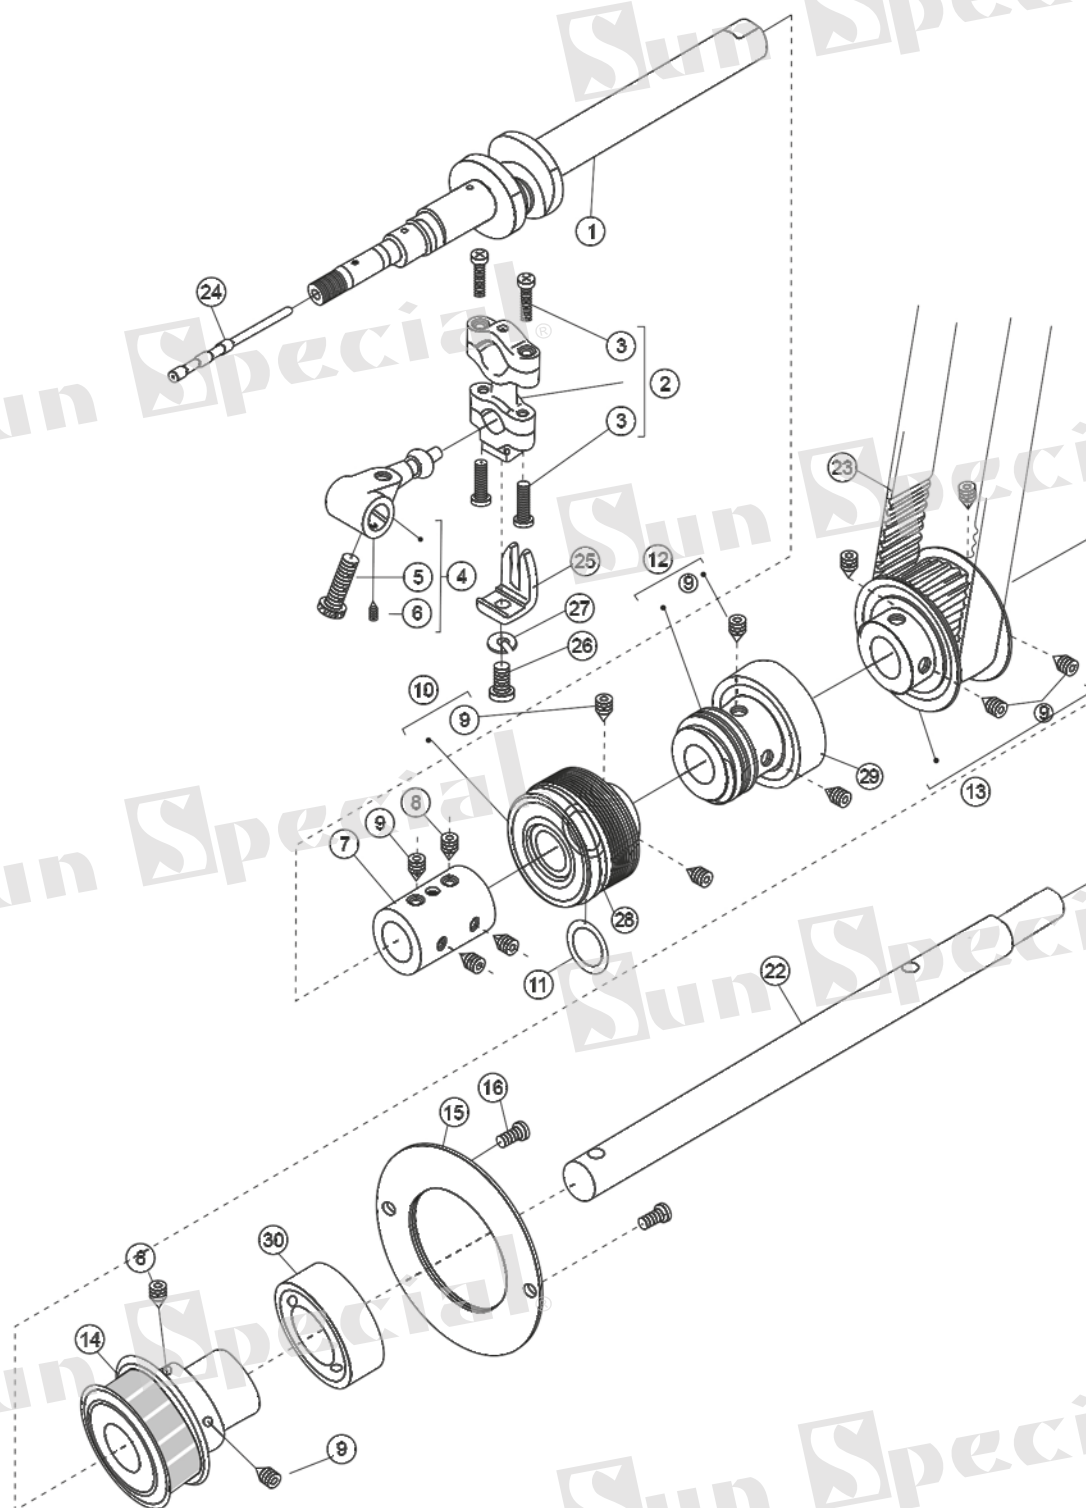

2.4 下轴传动机构 CRANK® SHAFT DRIVE MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	25050191B	下轴前节轴	1	1
2	252009-92	弯针连杆组件	1	1
3	7015	螺钉	8	8
4	252008-92	球曲柄	1	1
5	4534	螺钉	1	1
6	4545	螺钉	1	1
7	250506	联轴器	1	1
8	4555	螺钉	2	2
9	4547	螺钉	12	12
10	250508-91	下轴中衬套	1	1
11	206837	O 型圈	1	1
12	250543A91	油泵涡轮	1	1
13	250511-91	主动同步带轮组件	1	1
14	250530-91	打线主动同步带轮组件	1	1
15	250514	压紧圈	1	0
16	7082	压紧圈螺钉	2	0
22	F20-1	下轴后节	1	0
23	206050C	同步带	1	1
24	250525	下轴油量调节芯针	1	1
25	201074A	叉口	1	1
26	4019	叉口螺钉	1	1
27	202286	开口垫圈	1	1
28		轴承 O 型圈组件	1	1
29		轴承 O 型圈组件	1	1
30		轴承	1	1


2.5 上轴传动机构 ARM SHAFT DRIVE MECHANISM

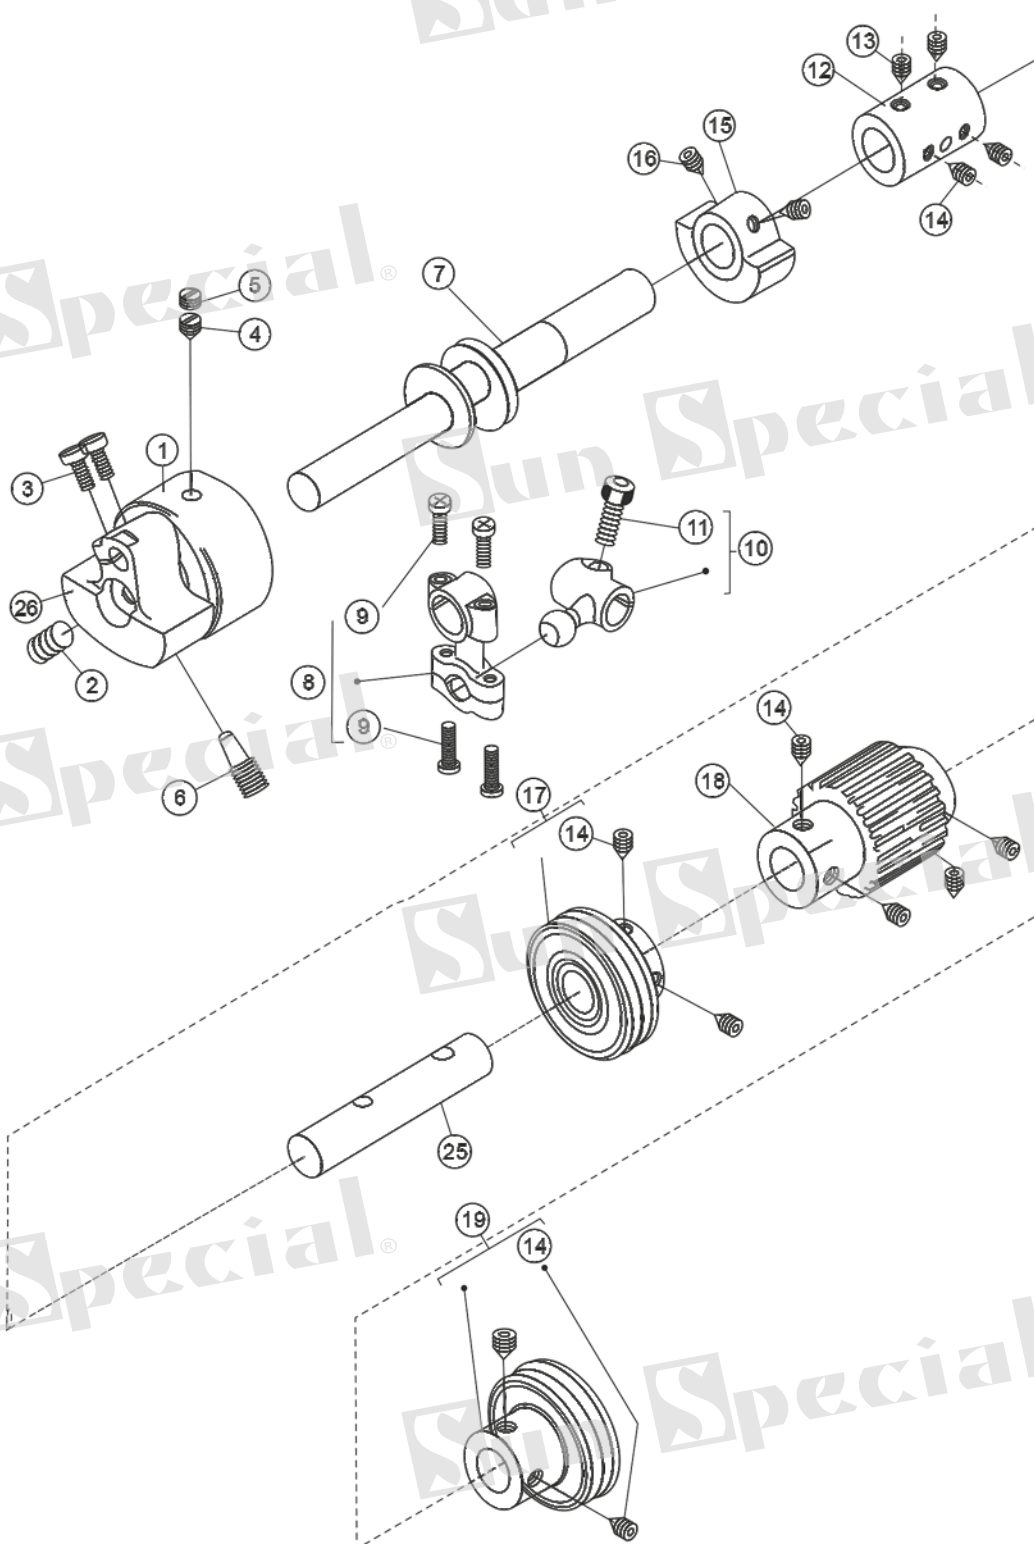

2.5 上轴传动机构 ARM SHAFT DRIVE MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	250516B92	针杆曲柄轴承组	1	1
2	4592	针杆曲柄紧固螺钉	1	1
3	7028	针杆曲柄夹紧螺钉	2	2
4	7153	定位螺钉	1	1
5	7152	止动螺钉	1	1
6	7268	长锥定位螺钉	1	1
7	250517A	上轴前节曲轴	1	1
8	253500-92	上线挑线连杆	1	1
9	7021	螺钉	4	4
10	253501A92	上挑线球曲柄	1	1
11	4534	球曲柄螺钉	1	1
12	250506	联轴器	1	1
13	4555	联轴器定位螺钉	1	1
14	4547	螺钉	10	10
15	250524	上轴平衡块	1	1
16	4514	螺钉	2	2
17	250529-91	上轴前衬套轴承组	1	1
18	250521	从动时规轮	1	1
19	250528-91	后衬套组件	1	1
25	F20-1	上轴后节	1	1
26	250516B92	针杆曲柄	1	1

2.6 针杆结构 NEEDLE BAR MECHANISM

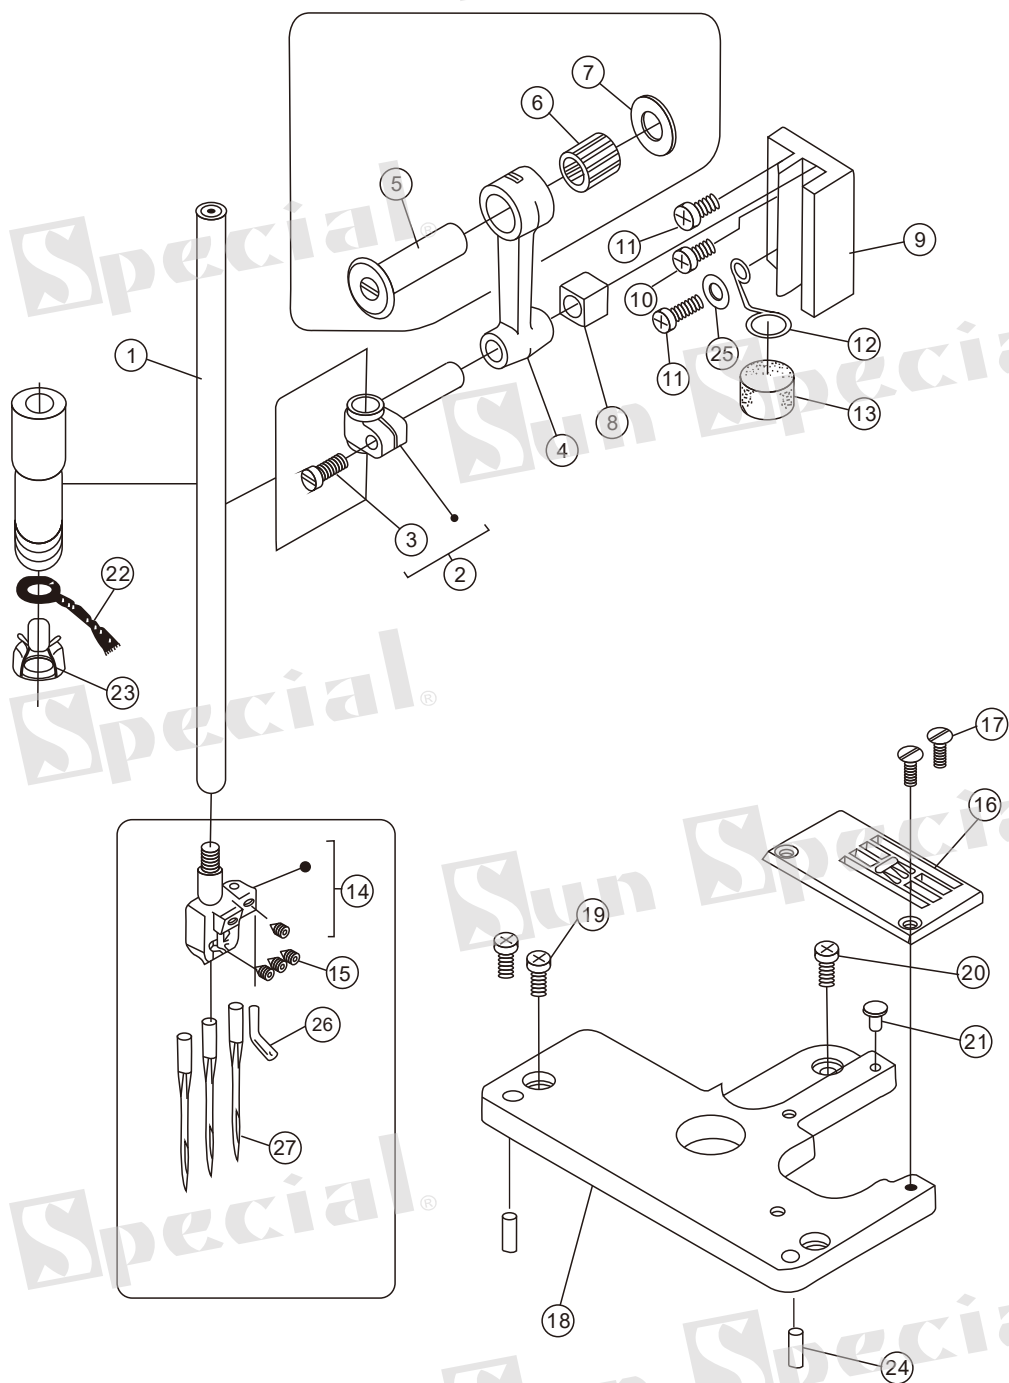

2.6 针杆机构 NEEDLE BAR DRIVE MECHANISM

序号 PEF NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1	251000-91	针杆	NEEDLE BAR	1	1
2	206061	针杆接头	NEEDLE BAR CLAMP	1	1
3	5325	针杆接头螺钉	SCREW	1	1
4	206052	针杆连杆	NEEDLE BAR DRIVING LINK	1	1
5	206053	针杆连杆销	PIN	1	1
6	240098	滚针轴承	NEEDLE BEARING	1	1
7	240101	垫圈	WASHER	1	1
8	206063	针杆滑块	BLOCK	1	1
9	206062	针杆滑块座	NEEDLE BAR BLOCK GUIDE	1	1
10	7020A	螺钉	SCREW	1	1
11	7021A	针杆滑块座螺钉	SCREW	2	2
12	251009	油毡定位圈	LATCH	1	1
13	179040-05	油毡	SPONGE	1	1
14		针夹	NEEDLE HOLDER	1	1
15	4554	针夹螺钉	SCREW	4	4
16		针板	NEEDLE PLATE	1	1
17	5373	针板螺钉	SCREW	2	2
18	251007	针板接板	BRACKET	1	1
19	7019A	螺钉	SCREW	2	2
20	7082	螺钉	SCREW	1	1
21	240123	防震塞	CUSHION RUBBER	1	1
22	212186	油线	OIL WICK	1	1
23	206524	针杆上套油线夹头	OIL WICK RETAINER	1	1
24		针板接板定位销	PIN	2	2
25	251009	垫圈	RING	1	1
26		过线杆	THREAD GUIDE	1	1
27		UY128GBS 11#机针	NEEDLE	3	3


4

“*”具体内容参看专用件表

Part number for “*”

Please refer the '2.23. Gauge Parts List'


2.7 保针机构 NEEDLE GUARD MECHANISM

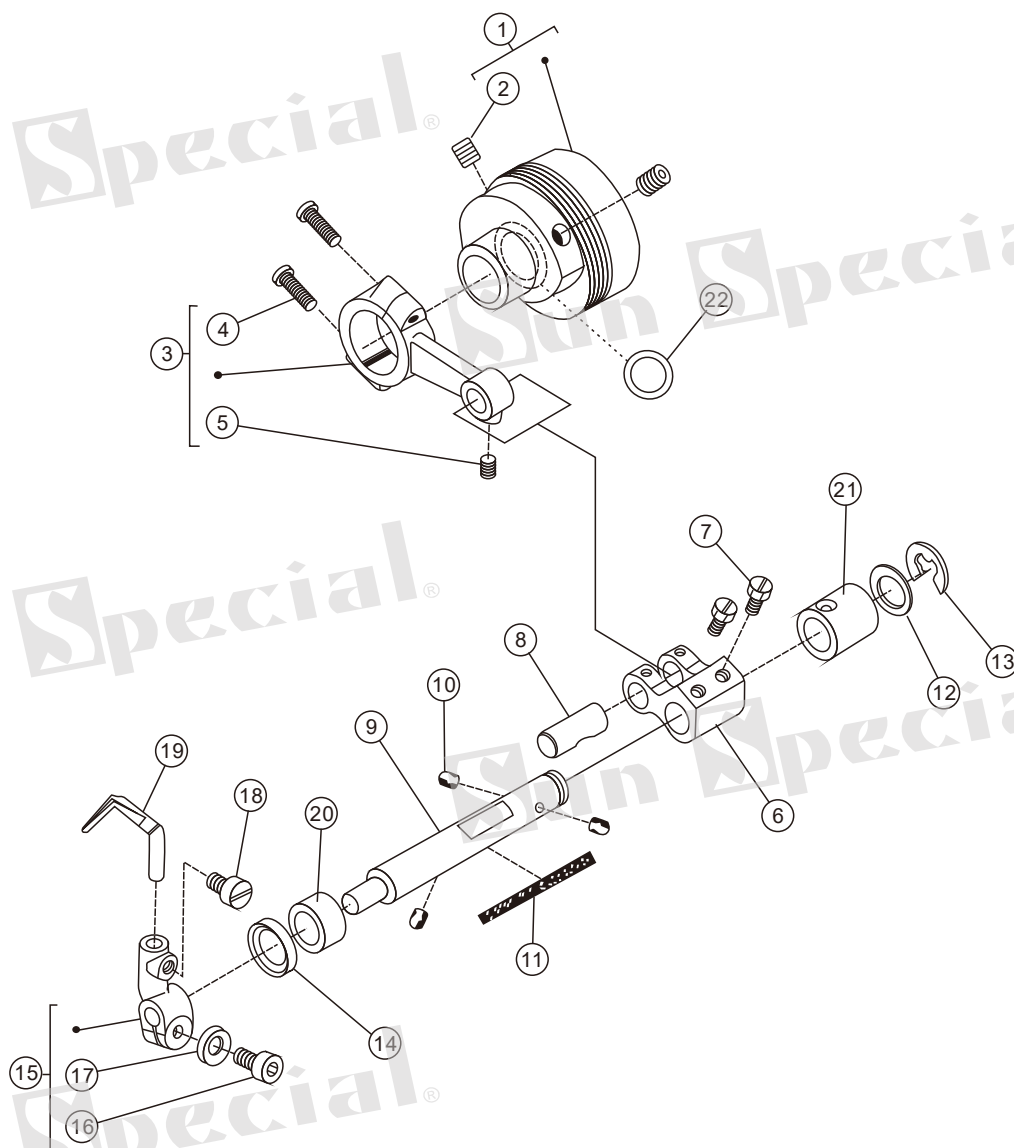

2.7 保针机构 NEEDLE GURAD MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	251517-91	下轴前衬套	1	1
2	4538	下轴前衬套螺钉	2	2
3	255501-92	保针连杆组件	1	1
4	7015A	螺钉	2	2
5	4543	螺钉	1	1
6	306093	保针曲柄	1	1
7	5084	保针曲柄螺钉	2	2
8	205495	保针曲柄销	1	1
9	251518	保针轴	1	1
10	206748	油线	1	1
11	202176	油线	1	1
12	240102	保针轴垫圈	1	1
13	205061	挡圈	1	1
14	204052A	保针轴骨架防油圈	1	1
15	251519-92	保针座	1	1
16	4500	螺钉	1	1
17	303067	垫圈	1	1
18	7017	螺钉	1	1
19		后保针	2	2
20		保针轴左套	1	1
21		保针轴右套	1	1
22		下轴前衬套 O 型圈	1	1


2.8 弯针机构 LOOPER DRIVE MECHANISM

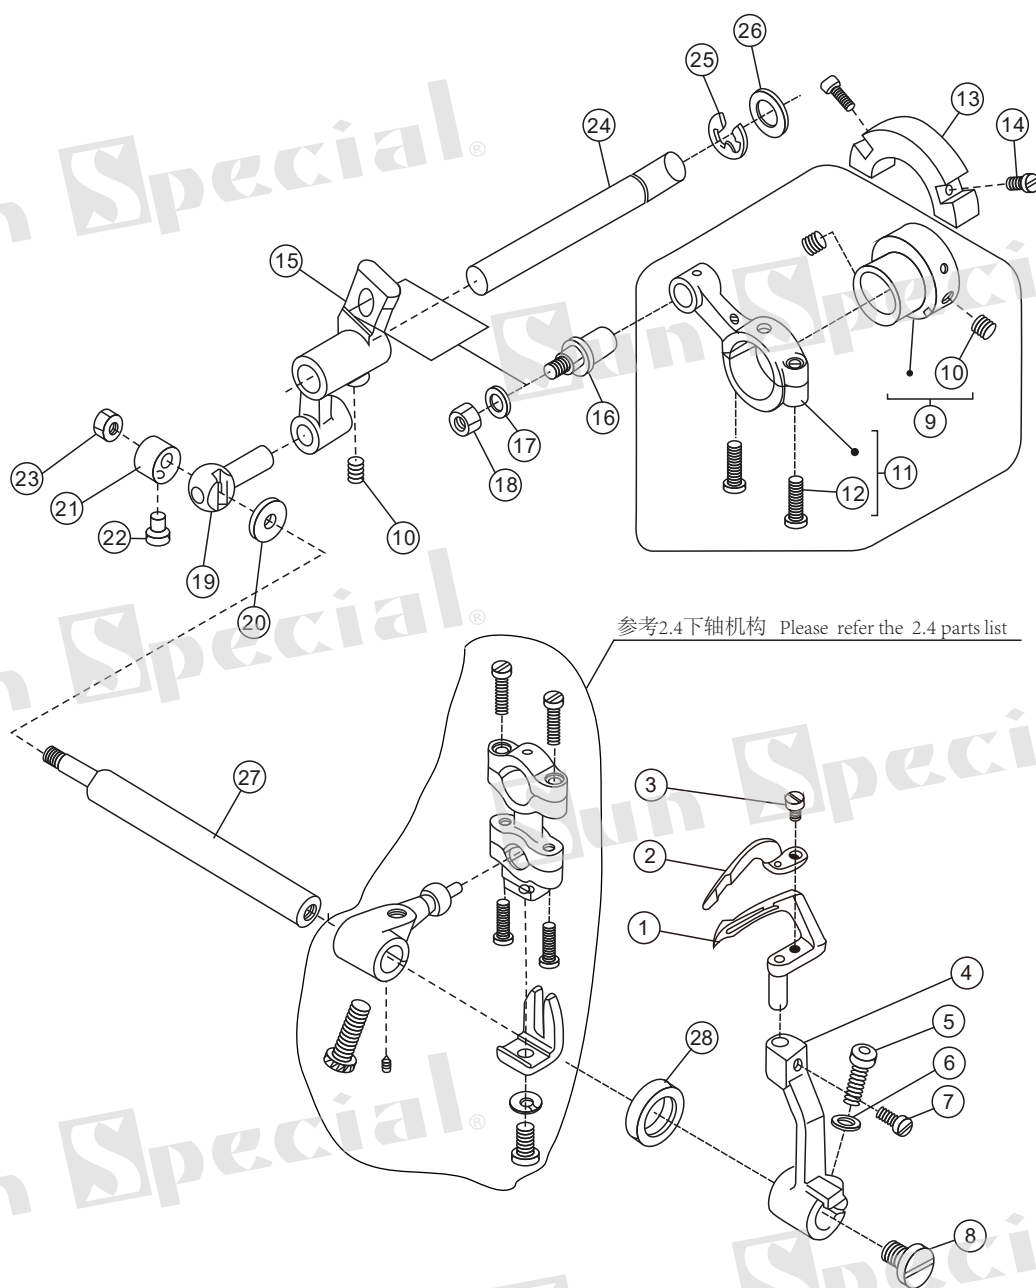

2.8 弯针机构 LOOPER DRIVE MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1		弯针 LOOPER	1	1
2		前保针 NEEDLE (FRONT)	1	1
3		螺钉 SCREW	1	1
4	252007	弯针曲柄 LOOPER HOLDER ASSEMBLY	1	1
5	4501	螺钉 SCREW	1	1
6	303067	垫圈 WASHER	1	1
7	7086	螺钉 SCREW	1	1
8	7085	弯针曲柄调节螺钉 SCREW	1	1
9	252000-92	偏心凸轮 ECCENTRIC ASSEMBLY	1	1
10	4539	螺钉 SCREW	3	3
11	252001-92	弯针连杆组件 CONNECTION ASSEMBLY	1	1
12	7015A	螺钉 SCREW	2	2
13	252010	平衡块 BALANCE WEIGHT	1	1
14	7011	螺钉 SCREW	2	2
15	252002A	弯针调节摆杆 CRANK	1	1
16	179399-05	弯针调节柱 SCREW	1	1
17	240062	垫圈 WASHER	1	1
18	4805	螺母 NUT	1	1
19	252003	弯针防止挡接头 BLOCK PIN	1	1
20	208028	垫圈 WASHER	1	1
21	208029	偏心紧圈 COLLAR	1	1
22	5084	螺钉 SCREW	1	1
23	4802	螺母 NUT	1	1
24	252004	弯针调节摆轴 SHAFT	1	1
25	205061	挡圈 RING	1	1
26	240102	垫圈 WASHER	1	1
27	252006	弯针轴 SHAFT	1	1
28		油封 OIL SEAL	1	1

2.9 送布机构 FEED MECHANISM

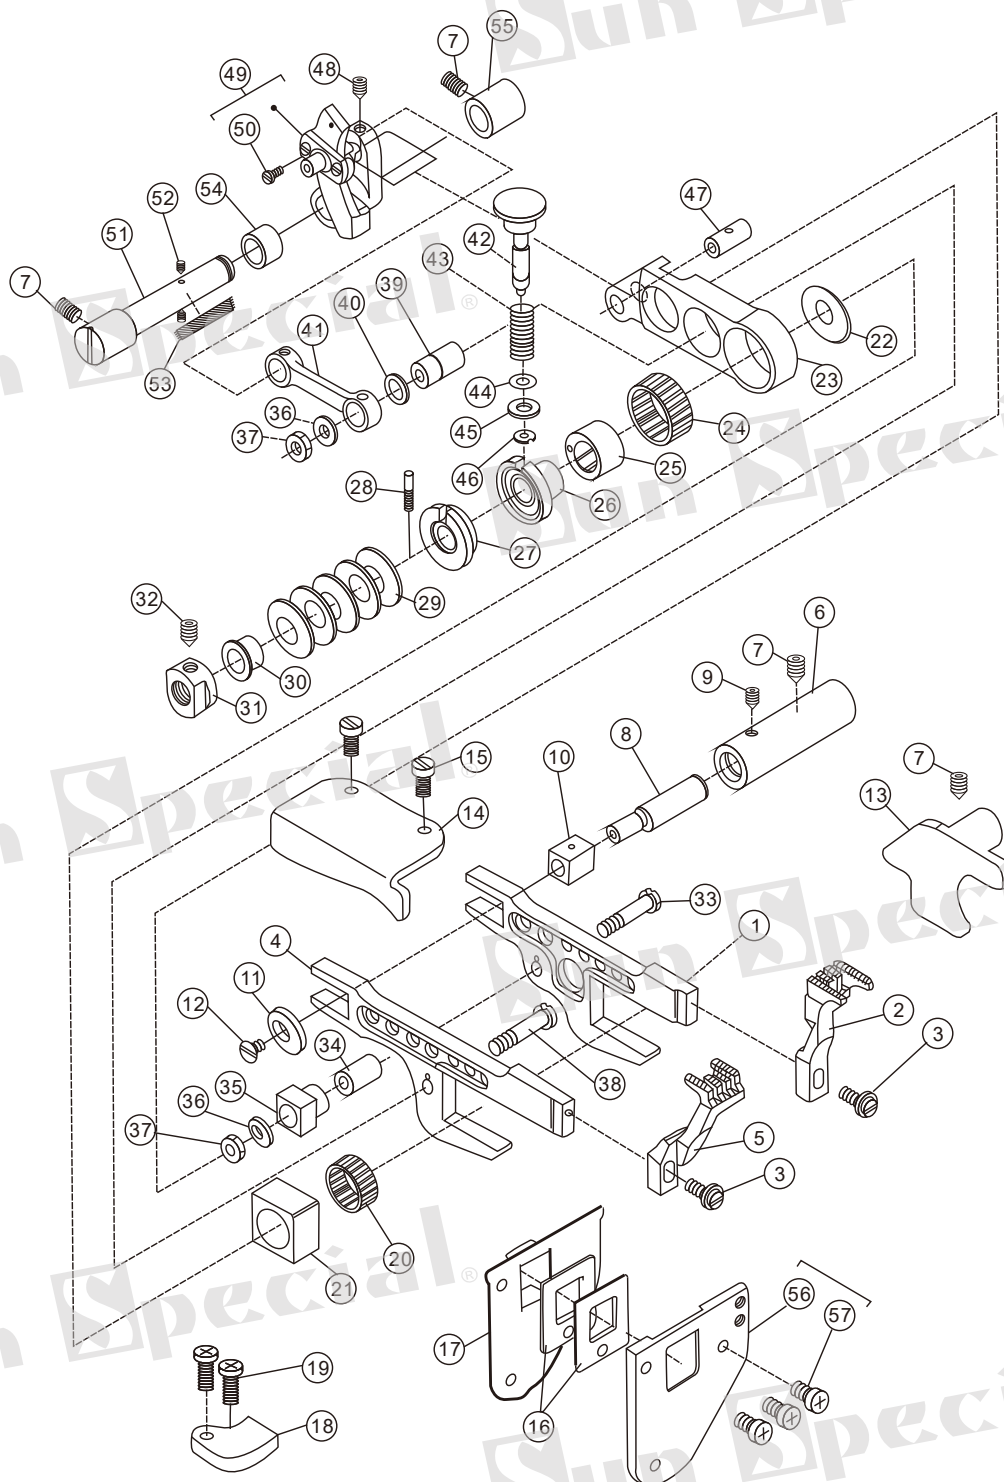


2.9 送布机构 FEED MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	252500-91	送料牙架	1	1
2		主送布牙	1	1
3	5590	螺钉	2	2
4	252502-91	差动牙架	1	1
5		差动送布牙	1	1
6	204129A	偏心轴套	1	1
7	4539	螺钉	4	4
8	204128A	牙架偏心轴	1	1
9	5382	偏心轴套螺钉	1	1
10	205857	滑块	1	1
11	204439A	偏心垫片	1	1
12	5317	偏心轴螺钉	1	1
13	252504	牙架右限位板	1	1
14	252507	牙架上限位板	1	1
15	7019	螺钉	2	2
16	206133	垫片	1	1
17	252509	垫板	1	1
18	252508	左限位板	1	1
19	7020A	螺钉	2	2
20	206128	滚针轴承	1	1
21	252519	牙架前滑块	1	1
22	252520	凸轮送布连杆垫圈	1	1
23	206562	送布连杆	1	1
24	206125	滚针轴承	1	1
25	252521	凸轮	1	1
26	252522	送布调节凸轮	1	1
27	252523-91	针距调套	1	1
28	252516	销螺钉	1	1
29	240125	碟形弹簧圈	5	5
30	252525	台阶套	1	1
31	252543	螺母	1	1
32	4514	台阶套紧定螺钉	1	1
33	206120	送布滑块连接螺钉	1	1
34	206119	送布滑块套	1	1
35	206583	送布滑块	1	1

2.9 送布机构 FEED MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
36	200096	垫片	2	2
37	3044	螺母	2	2
38	206123	连接螺钉	1	1
39	206586	送布连杆销套	1	1
40	206565	开口挡圈	1	1
41	206564	差动送布连杆	1	1
42	252526	针距按钮	1	1
43	240122	针距按钮簧	1	1
44	206366	针距按钮 O 型圈	1	1
45	204585	垫圈	1	1
46	200555	开口挡圈	1	1
47	206569	送布连杆销	1	1
48	4546	差动器紧定螺钉	1	1
49	252527-91	差动器组件	1	1
50	7031	差动器螺钉	1	1
51	252510	差动器轴	1	1
52	207358	油线	1	1
53	202175	油线	1	1
54	240119	差动器隔套	1	1
55	206571	差动器轴套	1	1
56	251520	弯针盖	1	1
57	7019A	螺钉	3	3

2.10 差动调节机构 DIFFERENTIAL FEED MECHANISM

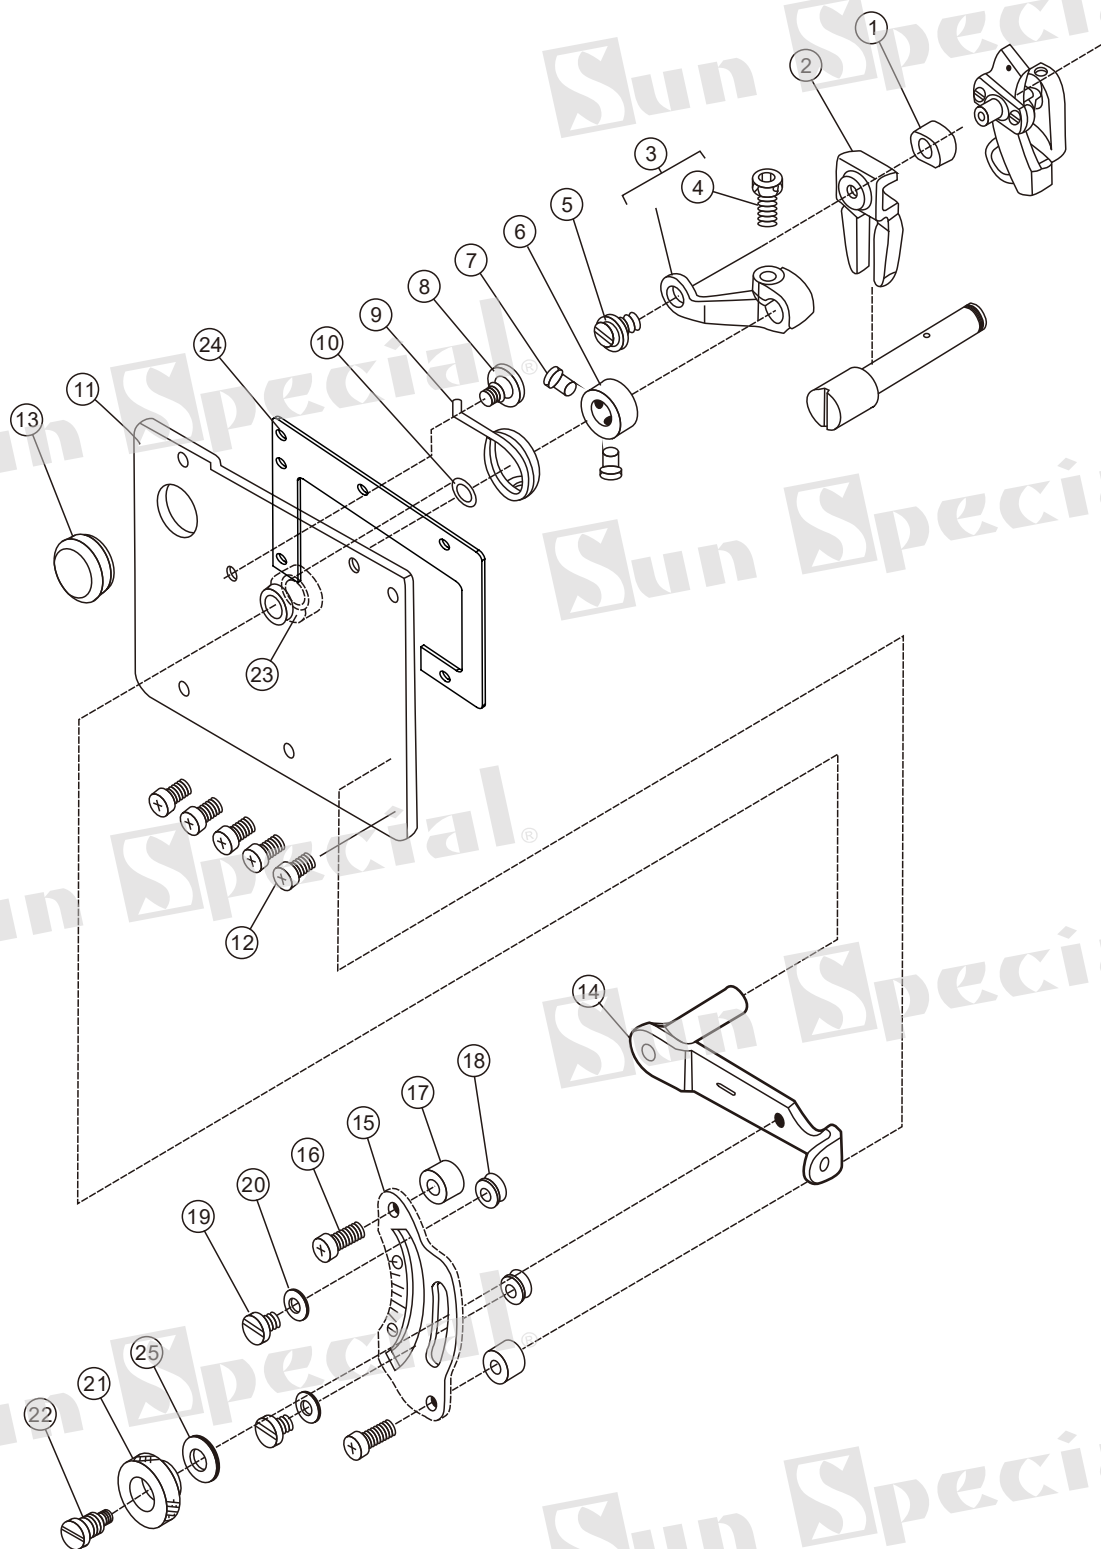


2.10 差动调节机构 DIFFERENTIAL FEED MECHANISM

252531

序号 PEF NO	零件号 PART NO	名称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	4531	滑块	1	1
2	5316	差动器吊板	1	1
3	240271	差动调节曲柄	1	1
4	1998-2	差动调节曲柄螺钉	1	1
5	7066	差动调节吊板螺钉	1	1
6	252536	差动扳手紧圈	1	1
7	240129	螺钉	2	2
8	252539A91	螺钉	1	1
9	7019A	差动调节复位弹簧	1	1
10	240162	O 型圈	1	1
11	252664-91	主板	1	1
12	252539	螺钉	5	5
13	7021A	闷头	1	1
14	240124	差动扳手	1	1
15	210171	差动刻度板	1	1
16	2905	螺钉	2	2
17	201185	刻度板隔套	2	2
18	210167	螺母	2	2
19	5486	刻度板固定螺钉	2	2
20		垫圈	2	2
21		孔刻度板螺母	1	1
22	211301	螺钉	1	1
23		衬套	1	1
24		主板密封垫	1	1
25		刻度盘垫片	1	1


压脚结构 PRESSER FOOT MECHANISM

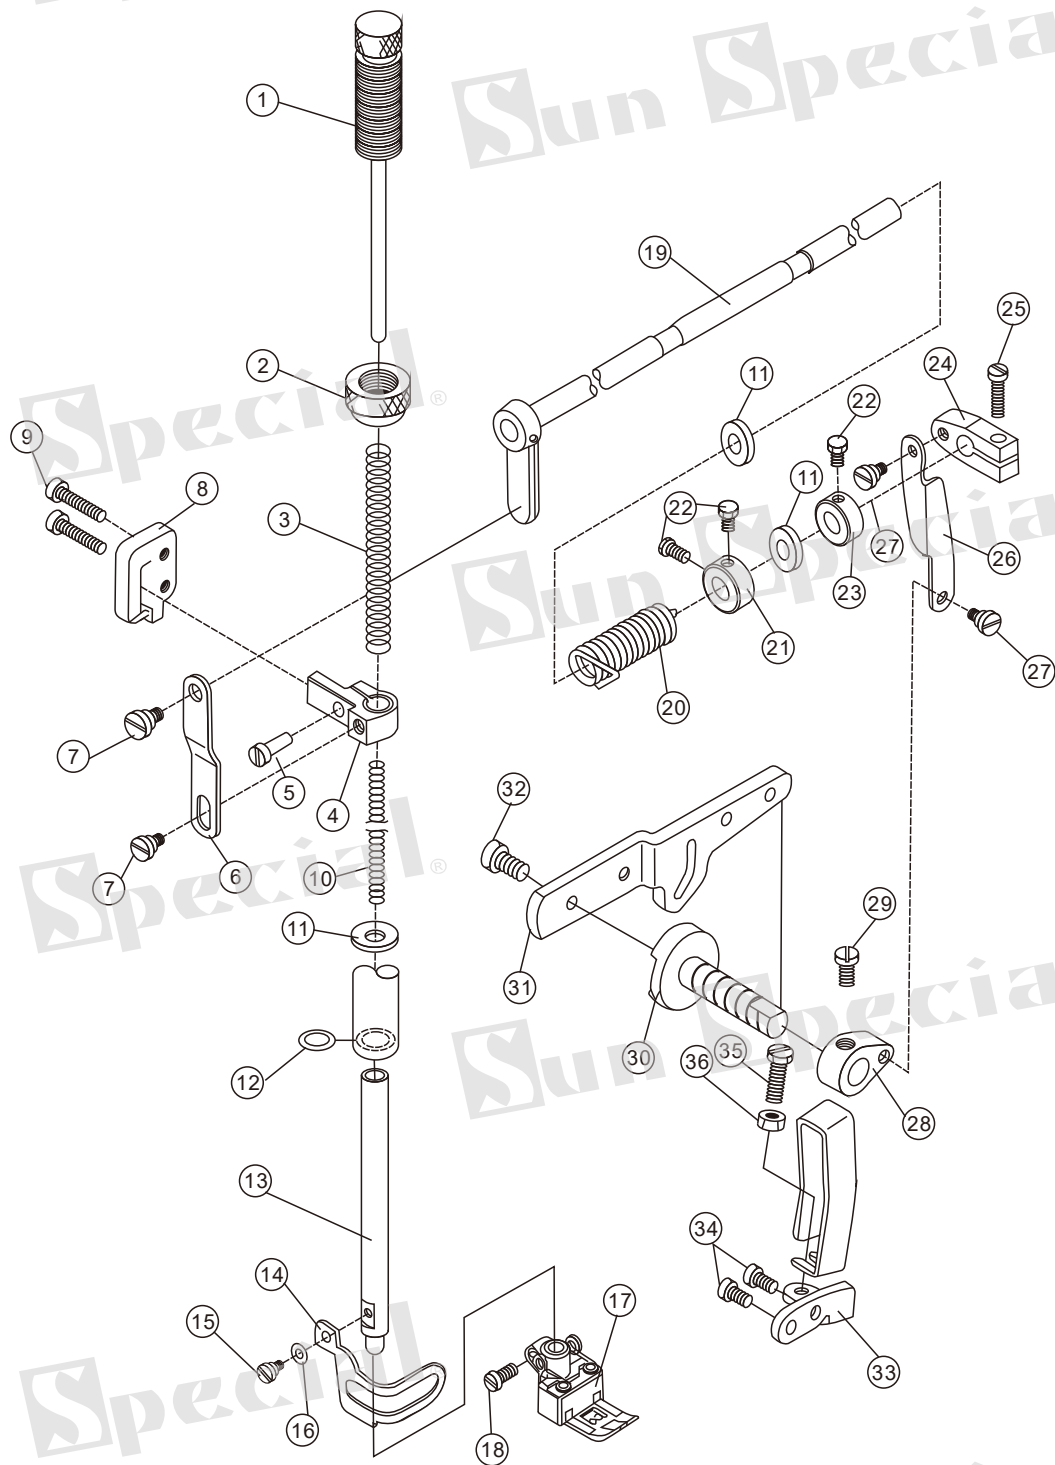

2.11 压脚机构 PRESSER FOOT MECHANISM

序号 PEF NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1	253003	调压螺钉	ADJUSTING BAR	1	1
2	240112	调压螺母	NUT	1	1
3	206139	调压外弹簧	SPRING	1	1
4	5118	压紧杆导架	PRESSER BAR CLAMP	1	1
5	206157	压紧杆导架螺钉	SCREW	1	1
6	5386	抬牙脚吊杆	LINK	1	1
7	253005-91	螺钉	SCREW	2	2
8	7025A	压杆导架座	GUIDE ASSEMBLY	1	1
9	240113	螺钉	SCREW	2	2
10	253018	调压内弹簧	SPRING	1	1
11	240095	压紧杆防油罩	OIL GUARD	3	3
12	253004	压紧杆油封	OIL SEAL	1	1
13	253028	压紧杆	RESSER BAR	1	1
14	7010	压紧防护罩	FINGER GUARD	1	1
15	202875	压紧防护罩螺钉	SCREW	1	1
16		垫圈	WASHER	1	1
17	1170-3	压脚组件	PRESSER FOOT ASSEMBLY	1	1
18	253008-91	螺钉	SCREW	1	1
19	253010	抬牙脚轴组件	LEVER	1	1
20	206156	抬牙脚弹簧	SPRING	1	1
21	5084	抬牙脚轴紧圈	COLLAR	1	1
22	192024	螺钉	SCREW	3	3
23	206149	限位紧圈	COLLAR	1	1
24	5187	抬牙脚调节曲柄	BELL CRANG (UPPER)	1	1
25	203011	螺钉	SCREW	1	1
26	5184	抬牙脚吊板	LINK	1	1
27	206148	螺钉	SCREW	2	2
28	2022-4	吊杆曲柄	BELL CRANG (LOWER)	1	1
29	253013	吊杆曲柄螺钉	SCREW	1	1
30	253014	拉杆座	SHAFT	1	1
31	7034	抬牙脚拉杆	LEVER	1	1
32	253015	螺钉	SCREW	1	1
33	7019A	右限位板	BRACKET	1	1
34	4549	螺钉	SCREW	2	2
35	4805	螺钉	SCREW	1	1
36		螺母	NUT	1	1


2.12 绷针结构 SPREADER MECHANISM

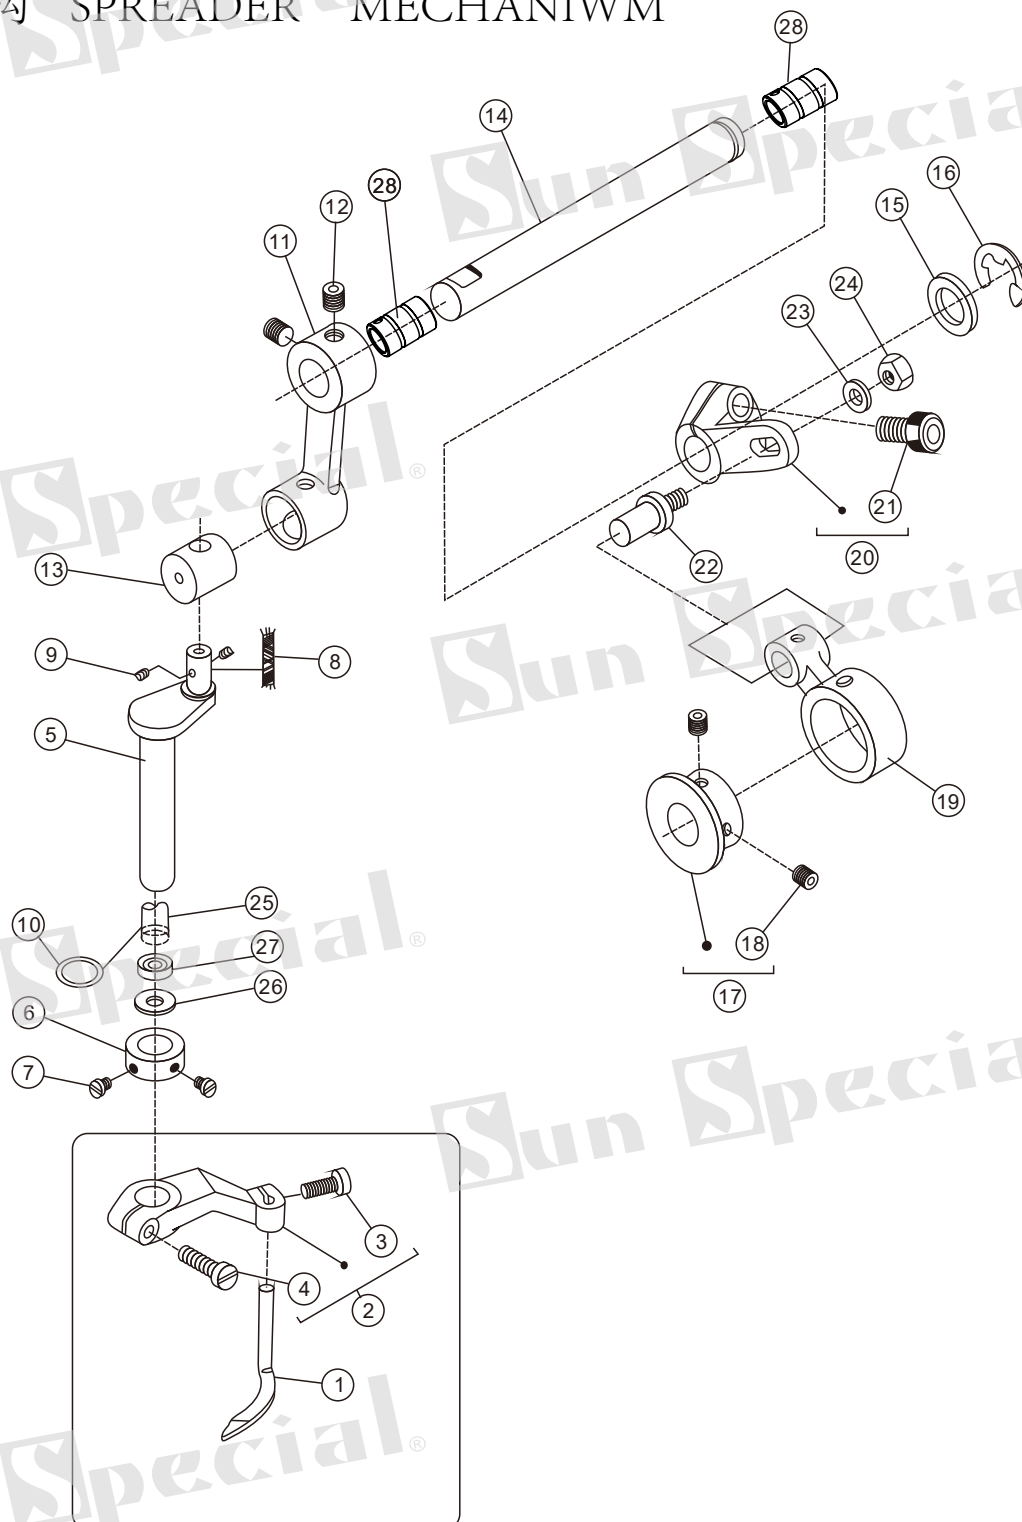

2.12 绷针机构 SPREADER MECHANISM

序号 PEF NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1	257565	绷针	SPREADER	1	1
2	254516-92	绷针下摆杆	LEVER-ASSEMBLY	1	1
3	7020	螺钉	SCREW	1	1
4	7022	绷针下摆杆紧定螺钉	SCREW	1	1
5	254508	绷针曲柄	CRANK SHAFT	1	1
6	212039	绷针紧圈	COLLER	1	1
7	1227	螺钉	SCREW	2	2
8	202176	油线	OIL WICK	1	1
9	207925	油线	FELT	2	2
10	233020	绷针竖轴 O 型圈	O RING	1	1
11	254506	绷针上摆杆	CRANK	1	1
12	4547	螺钉	SCREW	2	2
13	254507	绷针连接柱	BLOCK	1	1
14	254519	绷针横轴	SHAFT	1	1
15	206180	绷针横轴垫圈	WASHER	1	1
16	306671	开口挡圈	RING	1	1
17	254501A92	绷针凸轮	ECCENTRIC ASSEMBLY	1	1
18	4514	螺钉	SCREW	2	2
19	24511	绷针连杆	CONNECTION	1	1
20	254503-92	绷针调节摆杆	CRANK	1	1
21	4534	绷针调节摆杆螺钉	SCREW	1	1
22	254504	绷针调节螺钉	SCREW	1	1
23	240082	绷针调节螺钉垫圈	WASHER	1	1
24	4805	螺母	NUT	1	1
25		绷针竖套	BUSHING	1	1
26		绷针竖套油封垫圈	WASHER	1	1
27		绷针竖套油封	OIL SEAL	1	1
28		绷针横轴轴套	BUSHING	2	2


2.13 挺线及夹线机构 THREAD TENSION MECHANISM

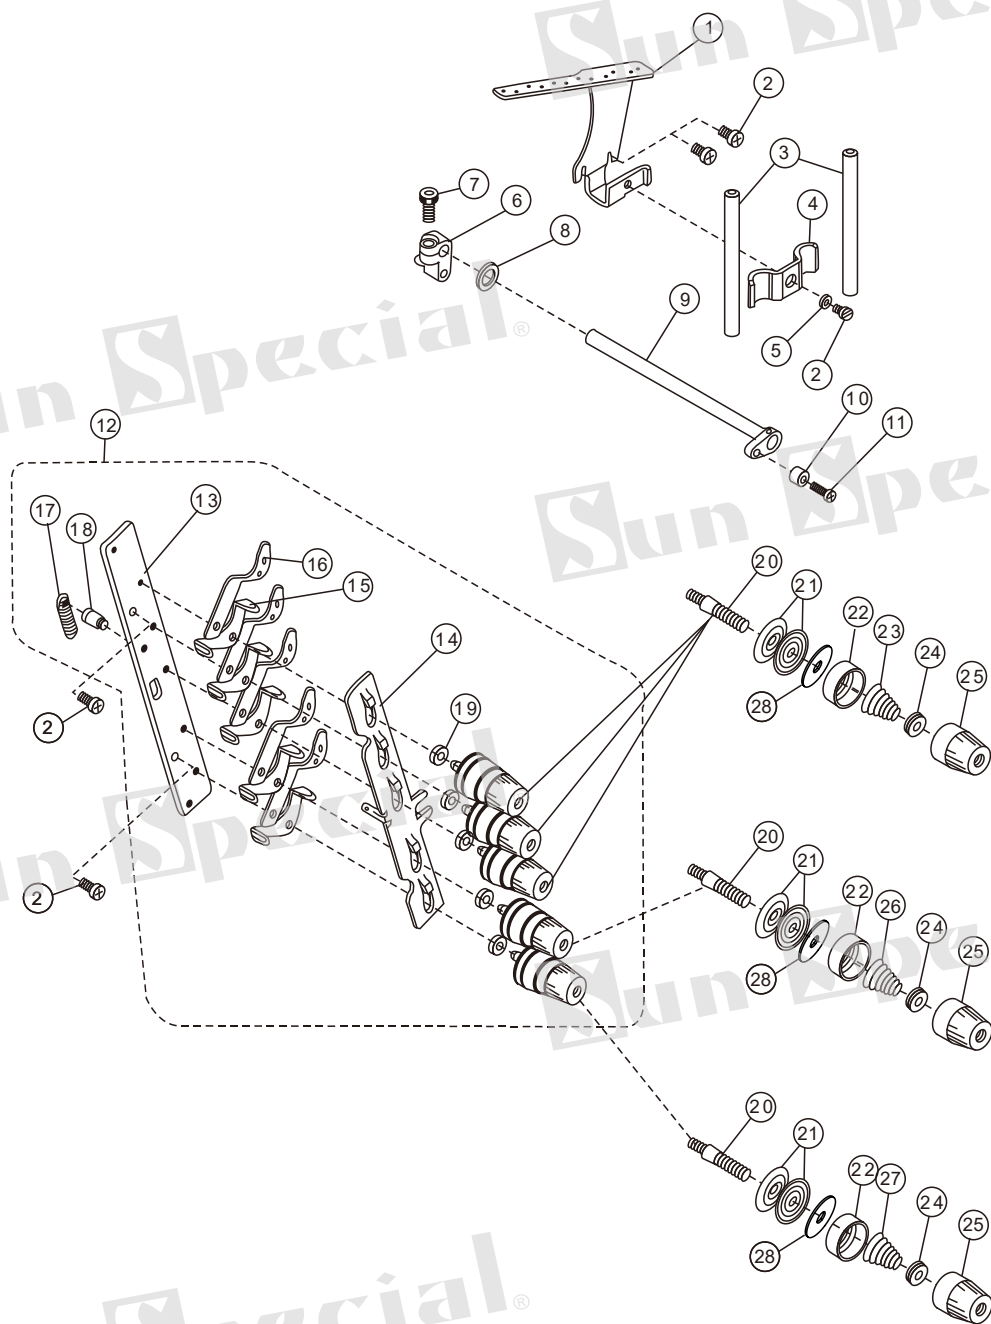

2.13 挺线及夹线机构 THREAD TENSION MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	254006	过线架	1	1
2	7019A	过线架螺钉	5	5
3	192120	过线管	2	2
4	254009	过线管压板	1	1
5		垫圈	1	1
6	254003B91	松线曲柄	1	1
7	4531	松线曲柄 螺钉	1	1
8	202868	垫圈	1	1
9	254000-91	挺线轴	1	1
10	254022	隔套	1	1
11	2133-1	隔套螺钉	1	1
12	254023C9U	五线过线板组件	1	1
13	254019	挺线板	1	1
14	254021	过线座	1	1
15	254020	压线过线板 2	5	5
16	206203	夹线过线板 1	5	5
17	306301	挺线板拉簧	1	1
18	5447	挺线板螺钉	1	1
19	206202	垫圈	5	5
20	1817-2A	夹线螺钉	5	5
21	210319	夹线板	10	10
22	208450-UA	夹线座	5	5
23	201086	强夹线簧	3	3
24	208448	夹线防松圈	5	5
25	208447-UA	夹线螺母	5	5
26	201086	弱夹线簧	1	1
27	201037	中夹线簧	1	1
28	210319	夹线板垫	5	5


2.14 挑线机构 NEEDLE & SPREADER THREAD MECHANISM

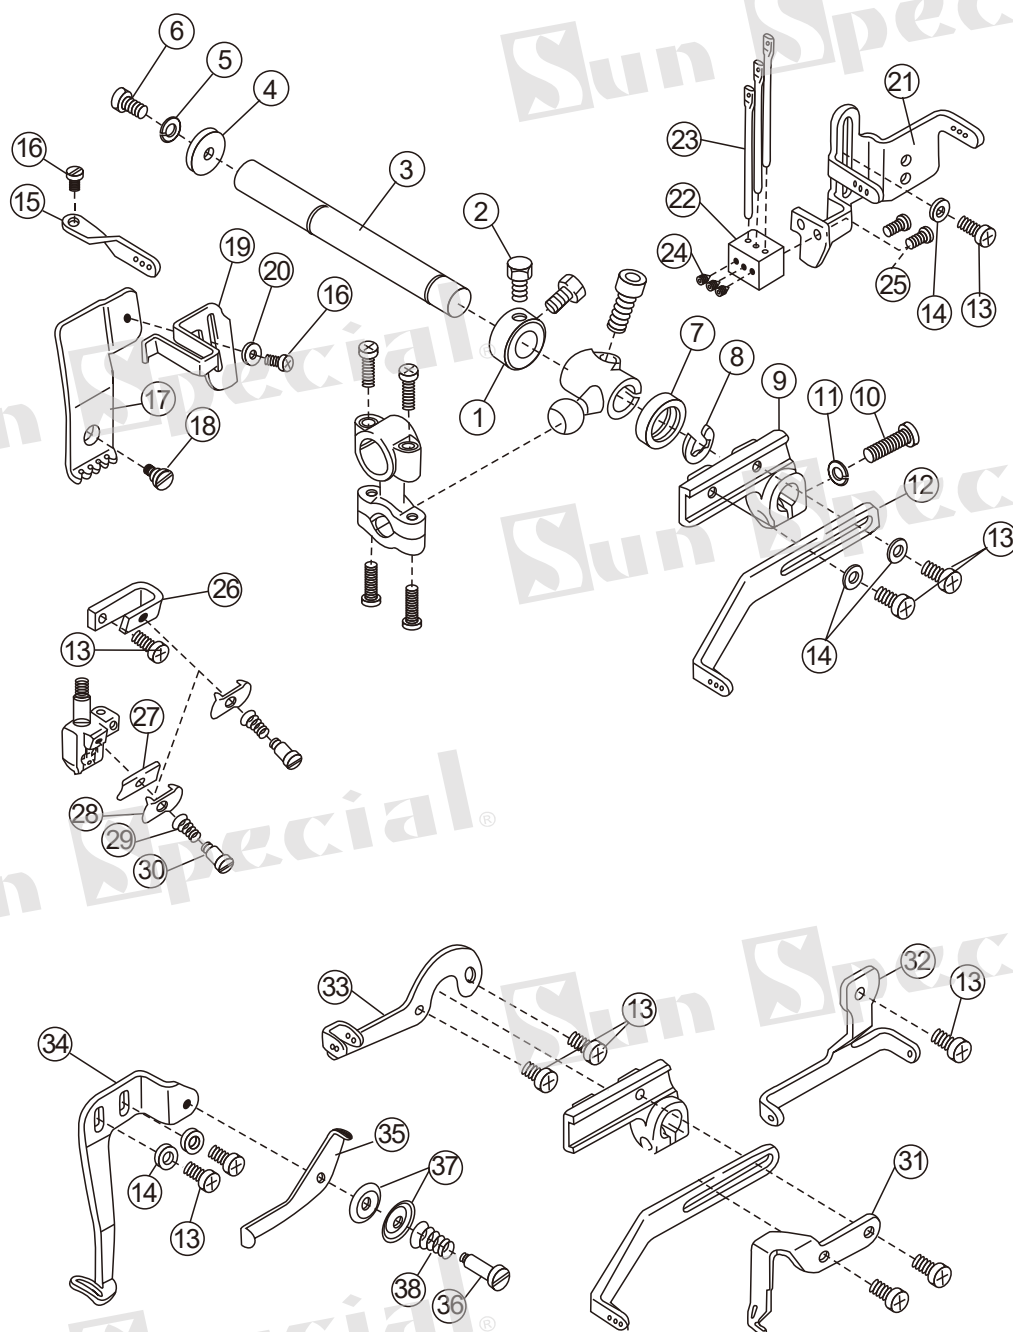

2.14 挑线机构 NEEDLE & SPREADER THREAD MECHANISM

序号 PEE NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1	240201	挑线杆轴紧圈	COLLAR	1	1
2	7110	挑线杆轴紧圈螺钉	SCREW	2	2
3	253503	挑线杆轴	SHAFT	1	1
4	204107	垫圈	WASHER	1	1
5	201252	止退圈	WASHER	1	1
6	4527	止退圈紧固螺钉	SCREW	1	1
7		密封圈	OIL SEAL	1	1
8	205061	轴用开口挡圈	RING	1	1
9	253504	挑线杆座	LEVER	1	1
10	4501	挑线杆座夹紧螺钉	SCREW	1	1
11	303067	止推垫圈	WASHER	1	1
12	253505A	挑线杆	THREAD TAKE-UP	1	1
13	7019	螺钉	SCREW	9	9
14	303448	垫圈	WASHER	5	5
15	253507	针杆上过线勾	THREAD GUIDE	1	1
16	7009	螺钉	SCREW	1	1
17	253508A	过线防护罩座	THREAD GUIDE	1	1
18	7077	过线防护罩座螺钉	SCREW	1	1
19	253509A	挑线防护罩	THREAD SUPPORT	1	1
20	202588	垫圈	WASHER	1	1
21	253544	硅油过线座	THREAD GUIDE	1	1
22	253545	过线钉座	HOLDER	1	1
23	234521	过线钉	THREAD GUIDE	3	3
24	4535	过线钉座紧定螺钉	SCREW	3	3
25	7010	过线钉座固定螺钉	SCREW	2	2
26	253516	小过线座	THREAD TENSION BRACKET	1	1
27	234561	针扎过线板	THREAD GUIDE	1	1
28	253593	针扎过线压板	THREAD RETAINER	1	1
29	253517	针扎过线簧	SCREW	1	1
30	9070-2	针扎过线螺钉	SCREW	1	1
31	253506	上义挑线杆	THREAD TAKE-UP	1	1
32	253515	底线过线座	THREAD GUIDE	1	1
33	253514	张线杆	THREAD GUIDE	1	1
34	253548	绷线过线下过线板	THREAD GUIDE	1	1
35	253547	绷线过线板	THREAD GUIDE	1	1
36	5387	夹紧螺钉	SCREW	1	1
37	137108	过线压板	THREAD RETAINER	2	2
38	137109	压线簧	SPRING	1	1


2.15 打线凸轮机构 LOOPER THREAD MECHANISM

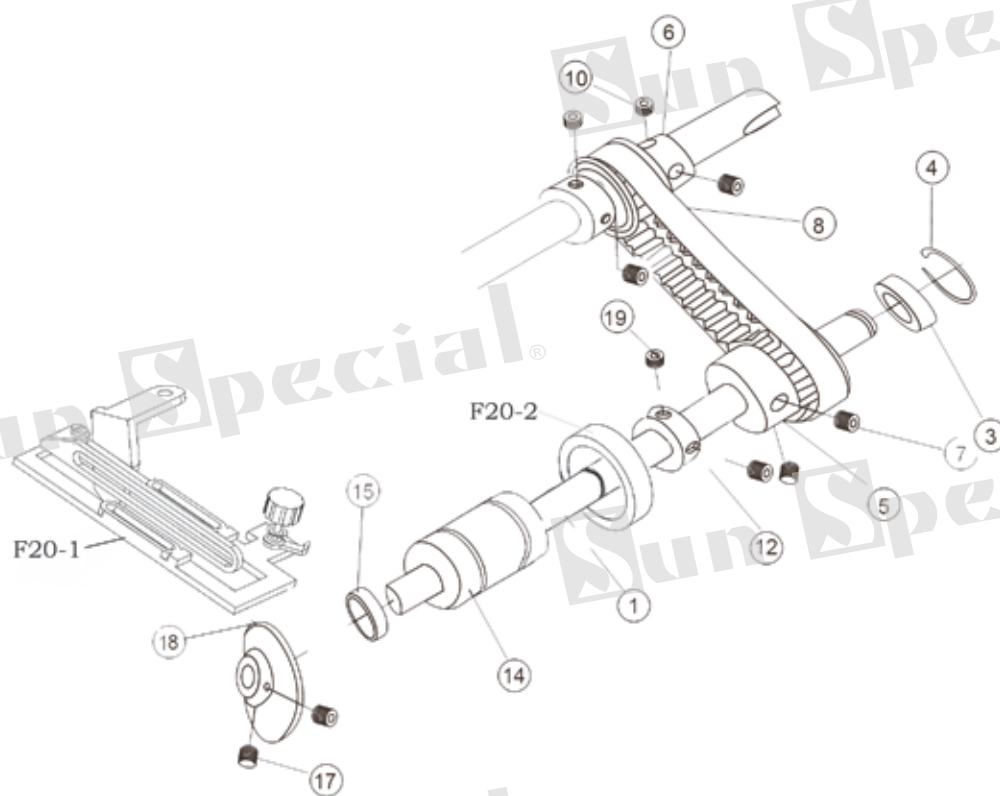

2.15 打线凸轮机构 LOOPER THREAD MECHANISM

序号 PEF NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1	F20-1	打线凸轮轴	SHAFT	1	1
3	F20-2	轴承	BRACKET	2	2
4	F20-3	挡圈	RING	2	2
5	F20-4	打线从动同步带轮	SMALL GEAR 1	1	1
6	F20-5	打线主动同步带轮	SMALL GEAR 2	1	1
8	F20-6	同步带	TIMING BELT	1	1
10	F20-7	螺钉	SCREW	2	2
12	F20-8	打线凸轮右衬套	GEAR SLEEVE (RIGHT)	1	1
14	F20-9	轴承	BRACKET	1	1
15	F20-10	垫圈	WASHER	1	1
17	F20-11	螺钉	SCREW	6	6
18	F20-12	打线凸轮	THREAD TAKE-UP	1	1
19	F20-13	骨架油封	PLUG	1	1


2.16 润滑机构 (A) LUBRICATION MECHANISM (A)

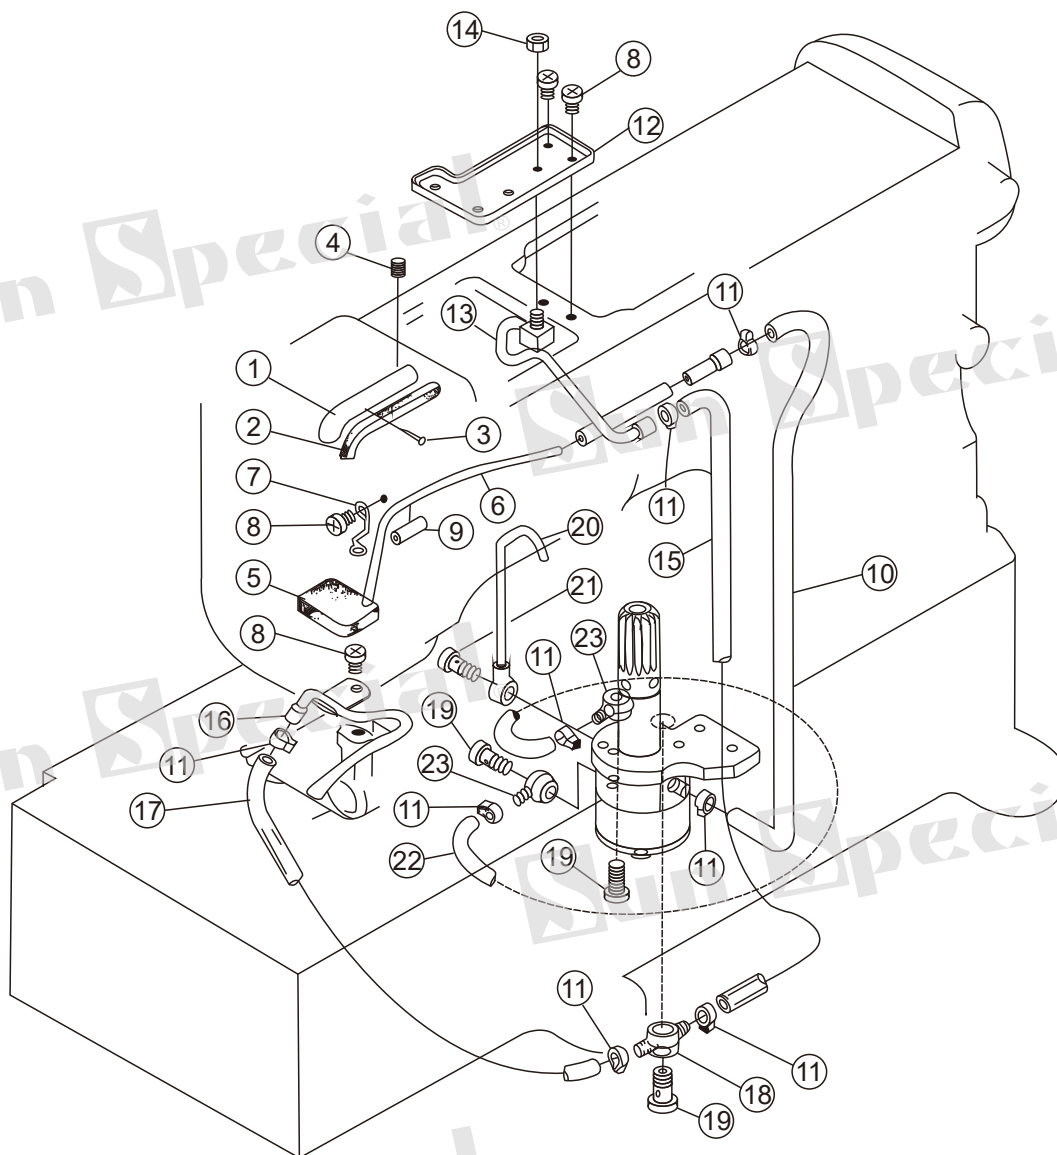

2.16 润滑机构(A) LUBRICATION MECHANISM(A)

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	255003	针杆曲柄过油管	OIL PIPE	1
2	240136	针杆曲柄供油毡	FELT	1
3	210766	油线钉	PIN	1
4	4514	螺钉	SCREW	1
5	255021	回油毡	FELT	1
6	255039	回油铜管	PIPE	1
7	7018A	毛毡定位勾	LATCH	1
8	255005	螺钉	SCREW	4
9	240143	回油皮管	PIPE	1
10	240135	回油皮管	PIPE	1
11	202199	进油短油管夹	CLAMP	6
12	255006	上油盘	OIL GUARD	1
13	255007-91	上轴供油管	OIL DISTRIBUTOR	1
14	4821	螺母	NUT	1
15	240134	回油皮管	PIPE	1
16	255010-91	下油管组件	OIL DISTRIBUTOR	1
17	240270	回油皮管	PIPE	1
18	200136	双通管接头	JOINT	1
19	205111	螺钉双通油接头	JOINT SCREW	3
20	240134	涡轮供油管组件	PIPE	1
21	255037	螺钉小双通油接头	JOINT SCREW	1
22	205113A	回油皮管	PIPE	1
23	200136	单通油管接头	JOINT	1


2.17 润滑机构 (B) LUBRICATION MECHANISM (B)

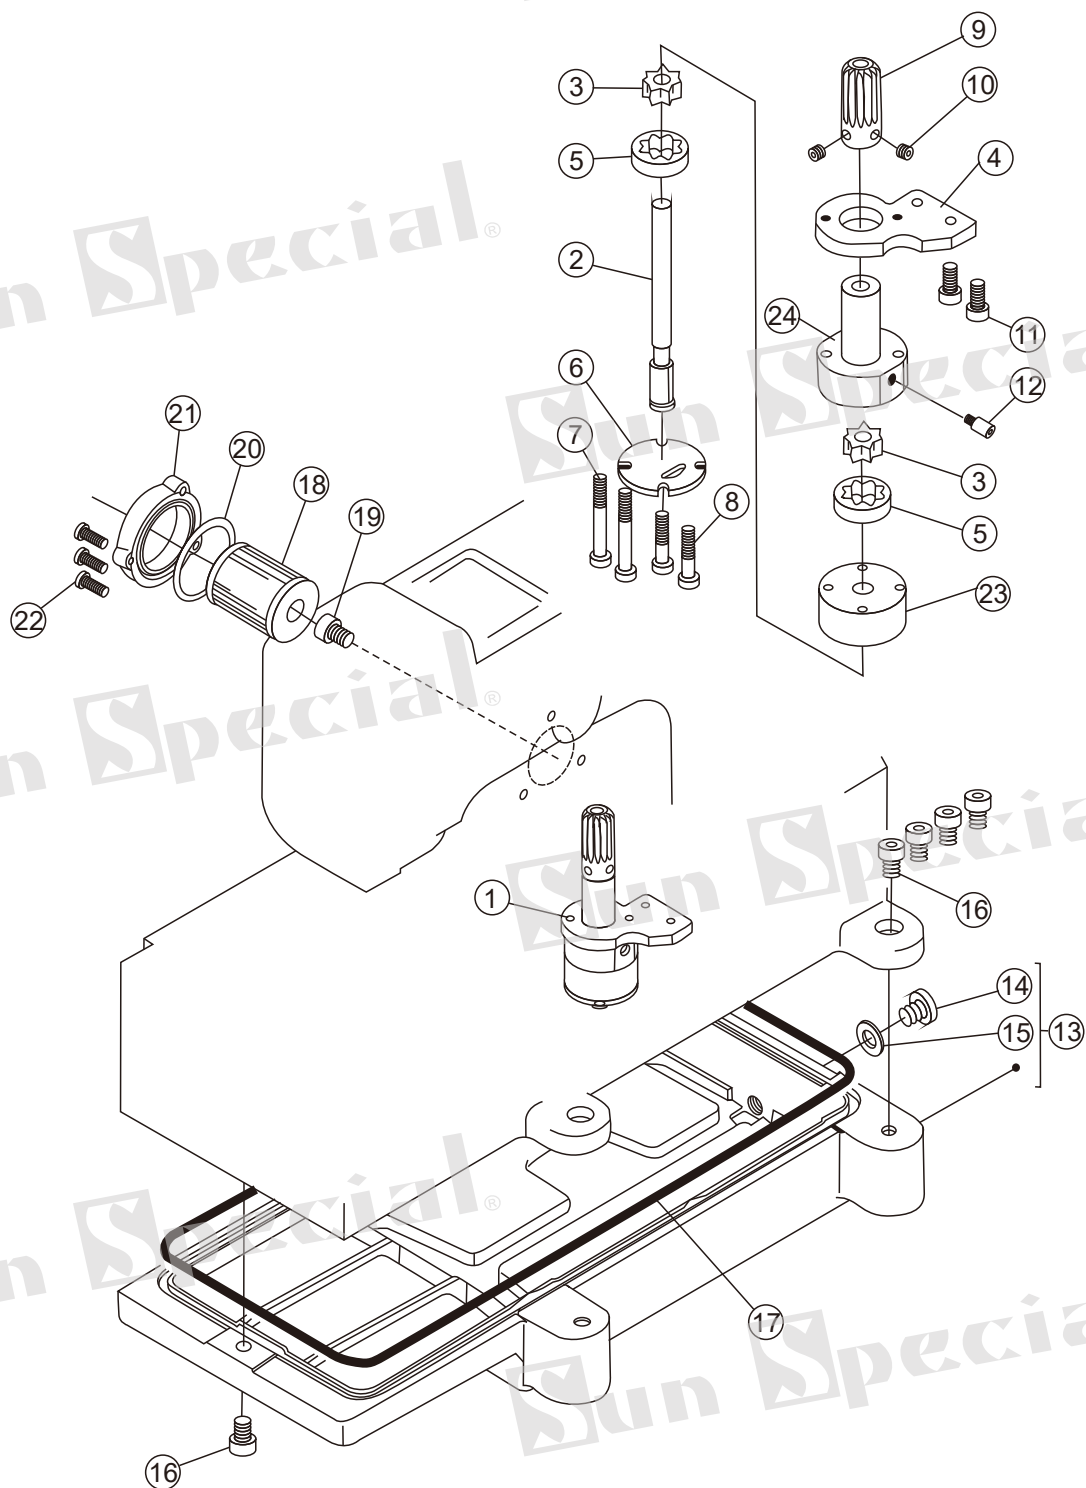

2.17 润滑机构(B) LUBRICATION MECHANISM(B)

序号 PEF NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1		油泵组件	OIL PUMP ASSEMBLY	1	1
2	255024	油泵轴	SHAFT	1	1
3	255026	齿轮	ROTOR	2	2
4	255033	固定板	SETTING BOARD	1	1
5	255027	内齿轮	ROTOR	2	2
6	255028	底板	COVER	1	1
7	7105	长螺钉	SCREW	2	2
8	7026	底板固定螺钉	SCREW	2	2
9	255019	油泵涡轮	WORM WHEEL	1	1
10	4514	螺钉	SCREW	2	2
11	4531	固定板螺钉	SCREW	2	2
12		油泵回油管接头	JOINT SCREW	1	1
13	255000-92	油盘	OIL RESERVOIR	1	1
14	5138B	油盘螺钉	SCREW	1	1
15	202287A	密封垫	WASHER	1	1
16	4504	油盘下螺钉	SCREW	1	1
17	255001	油盘防油垫	O RING	1	1
18	206233	滤油器	FILTER ELEMENT	1	1
19	210200	滤油器螺钉	SCREW	1	1
20	206431	O 型圈	O RING	1	1
21	210201-PD	滤油器盖	COVER	1	1
22	7021A	滤油器盖固定螺钉	SCREW	3	3
23	255023	油泵壳体	OIL PUMP COVER	1	1
24	255022	上油泵体	UPPER OIL PUMP	1	1

2.18 硅油盒机构 SILICON OIL RESERVOIR MECHANISM

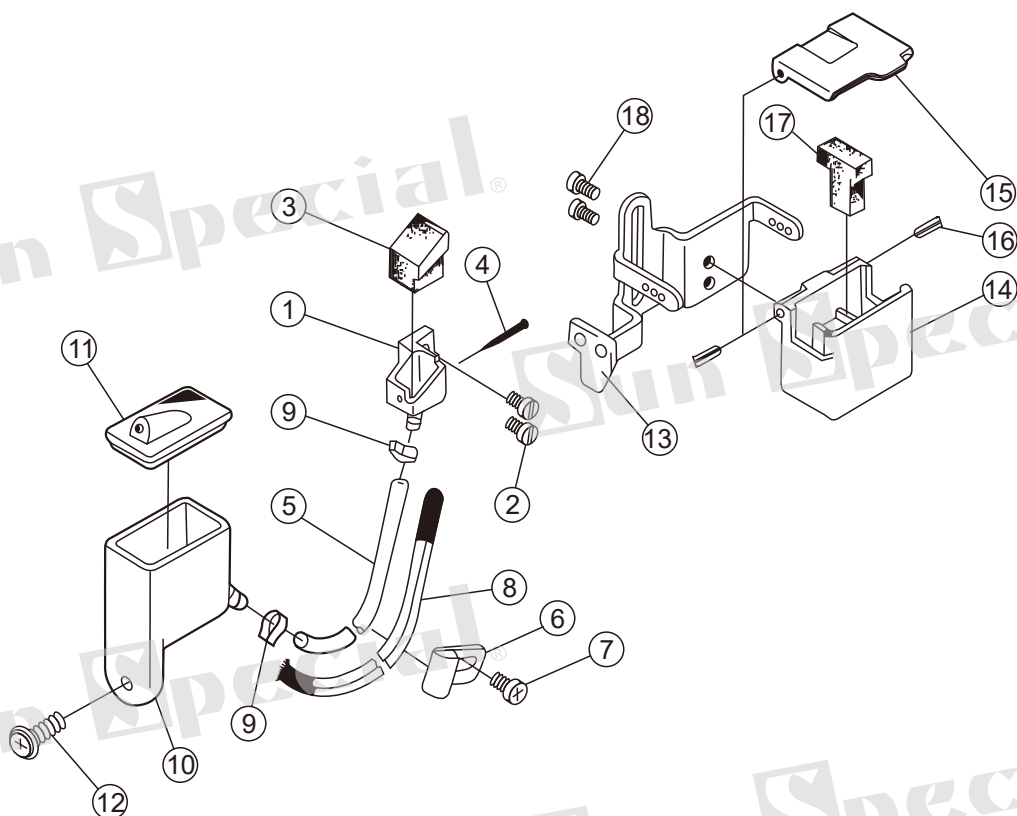


2.18 硅油盒机构 SILICON OIL RESERVOIR MECHANISM

序号 PEF NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1	255013	硅油盒壳体	NEEDLE COOLER (LOWER)	1	1
2	7010	螺钉	SCREW	2	2
3	255014	硅油盒毛毡	FELT	1	1
4	210766	大头针	PIN	1	1
5	240117	油管	TUBE	1	1
6	206115	油线压板	BRACKET	1	1
7	7017A	螺钉	SCREW	1	1
8	202175	油线	OIL WICK	1	1
9	200155	夹头	CLAMP	1	1
10	255015	硅油驻盒	SILICON OIL RESERV IOR (LOWER)	1	1
11	255016	硅油驻盒盖	CAP	1	1
12	7020	螺钉	SCREW	1	1
13		硅油过线座	THREAD GUIDE	1	1
14	207066-PD	上硅油盒	SILICON OIL RESERV IOR (UPPER)	1	1
15	207067-PD	上硅油盒盖	CAP	1	1
16	206781	销	FIN	1	1
17	207068	上硅油毡	FELT	1	1
18	5053	螺钉	SCREW	2	2

Sun Special

2.19 线架 THREAD STAND










Qualidade e Tecnologia

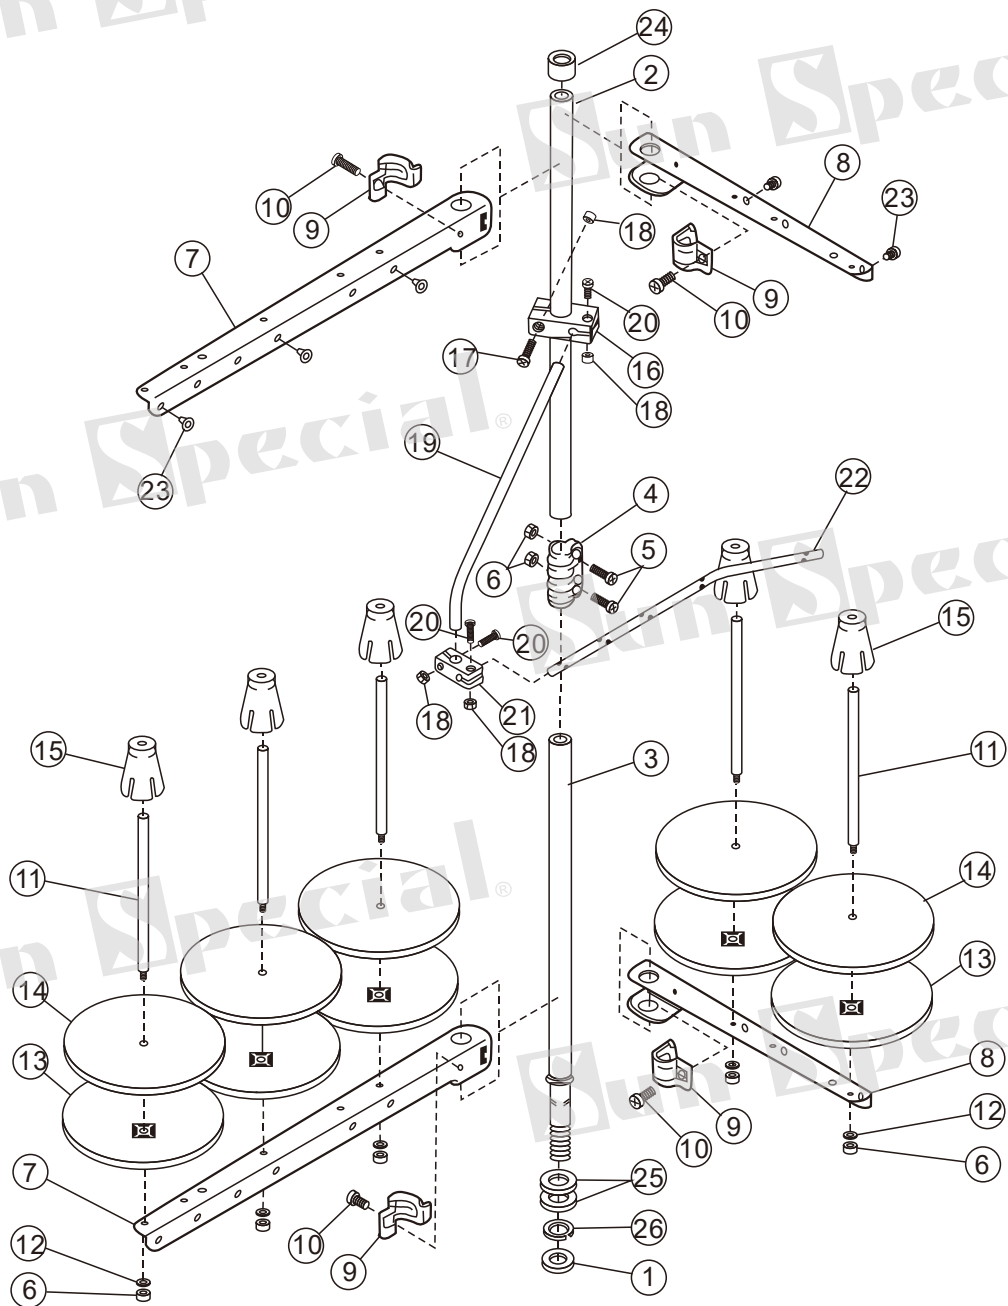

2.19 线架 THREAD STAND

序号 PEF NO	件 号 PART NO	名 称	DESCRIPTION	数量 QTY	
				562A	562A-BD
1	5476	螺母	NUT	1	1
2	502-SA	上过线管	THREAD BAR (UPPER)	1	1
3	503-SA	下过线管	THREAD BAR (LOWER)	1	1
4	504-SA	过线夹	JOINT	1	1
5	4021	螺钉	SCREW	2	2
6	4805	螺母	NUT	7	7
7	505-SA	上过线架	BRACKET	2	2
8		前过线架	BRACKET	2	2
9		夹子	HOLDER	4	4
10		螺钉	SCREW	4	4
11	380A	线团固定柱	SPOOL PIN	5	5
12	201252	弹簧垫圈	SPRING WASHER	5	5
13	4803	线盘	SPOOL TRAY	5	5
14	507	线盘垫	SPOOL MAT	5	5
15	382-SA	定心座	SPOOL PETAINING	5	5
16	383-SA	中过线板夹紧块	BRACKET	1	1
17	4014	螺钉	SCREW	1	1
18	4803	螺母	NUT	4	4
19	384	中过线接杆	THREAD GUIDE BAR	1	1
20	4012	螺钉	SCREW	3	3
21	233-SA	中过线接头	BRACKET	1	1
22	293A	中过线杆	THREAD GUIDE BAR	1	1
23	506	过线管	THREAD GUIDE	5	5
24	386	上立柱橡皮封	RID CAP	1	1
25		垫圈	WASHER	2	2
26	509	弹簧垫圈	SPRING WASHER	1	1


2.20 台板及附件 MACHINE SUPPORTING MECHANISM

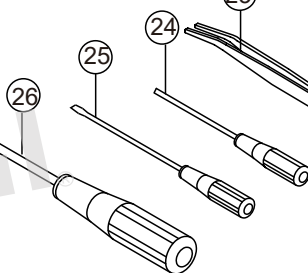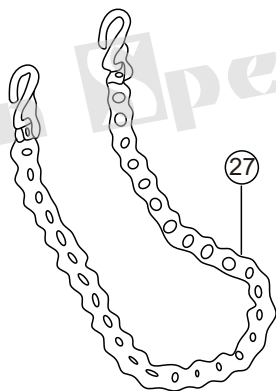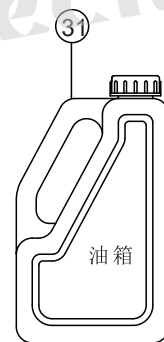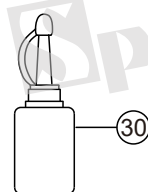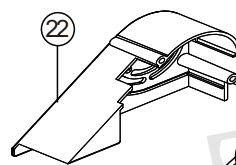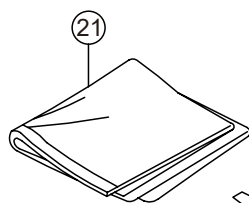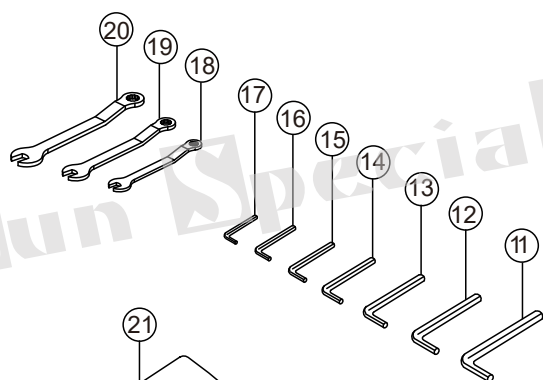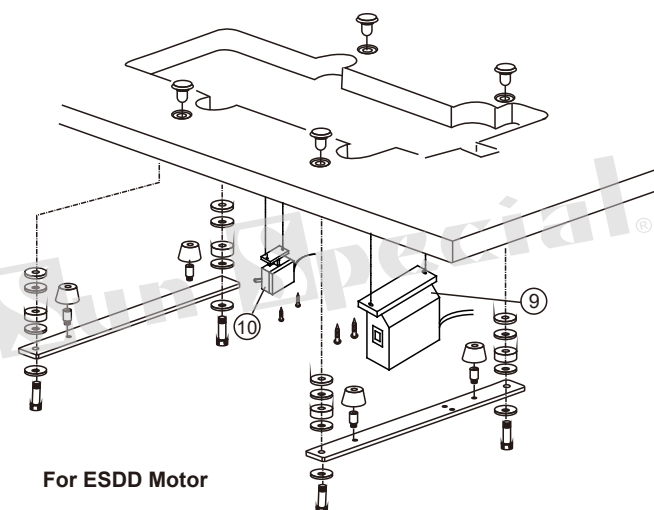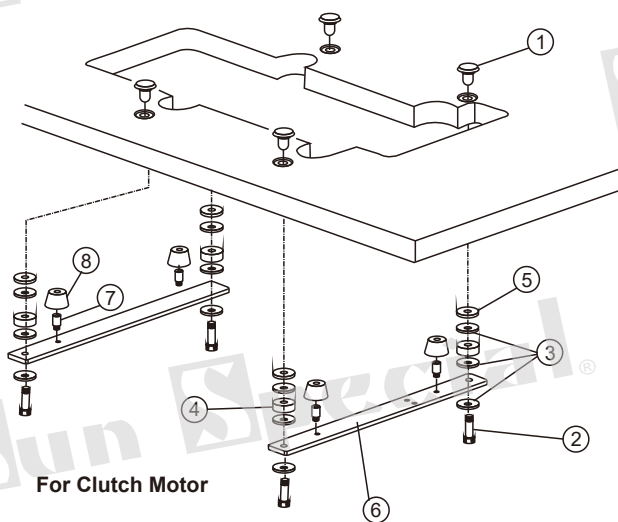

2.20 台板及附件 MACHINE SUPPORTING MECHANISM

序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量QTY	
			562A	562A-BD
1	206336	台板螺钉	4	4
2	4512	长螺钉	4	4
3	206337	垫片	12	12
4	205764	大胶垫	4	4
5	205467	小胶垫	4	4
6	259000	承重板	2	2
7	7093	螺钉	4	4
8	206338	承重板胶垫	4	4
9	F20-1	绷缝三自动电控	0	1
10	F20-2	踏板控制器	0	1
11		内六角扳手 6mm	1	1
12		内六角扳手 5mm	1	1
13		内六角扳手 4mm	1	1
14		内六角扳手 3.5mm	1	1
15		内六角扳手 3mm	1	1
16		内六角扳手 2.5mm	1	1
17		内六角扳手 2mm	1	1
18		扳手 6	1	1
19		扳手 7	1	1
20		扳手 8	1	1
21	F20-3	机头罩☆	1	1
22	F20-4	皮带罩组件	1	0
23		镊子组件	1	1
24		内六角开刀	1	1
25		中螺丝刀	1	1
26		大螺丝刀	1	1
27	F20-5	踏板链条组件	1	1
28	F20-6	UY128GAS 11#机针	3	3
29		说明书☆	1	1
30		硅油瓶	1	1
31		油箱	1	1


2.21 卷边专用件 FOLDER ASM®

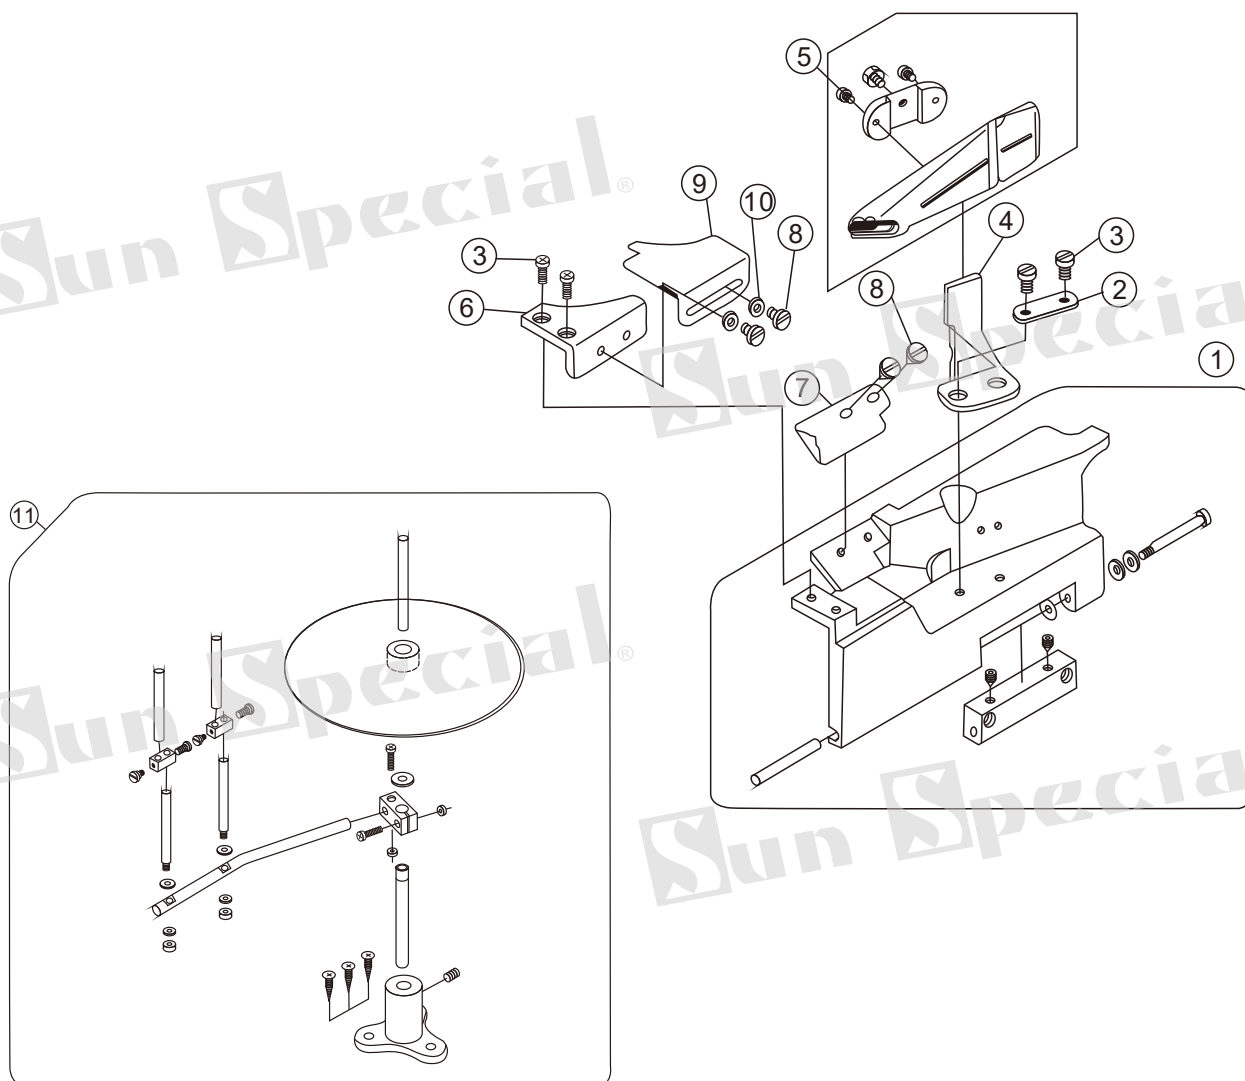

2.21 卷边专用件 FOLDER ASM


[illegible]


2.22 直驱电机结构 ESDD MOTOR COMPONENTS


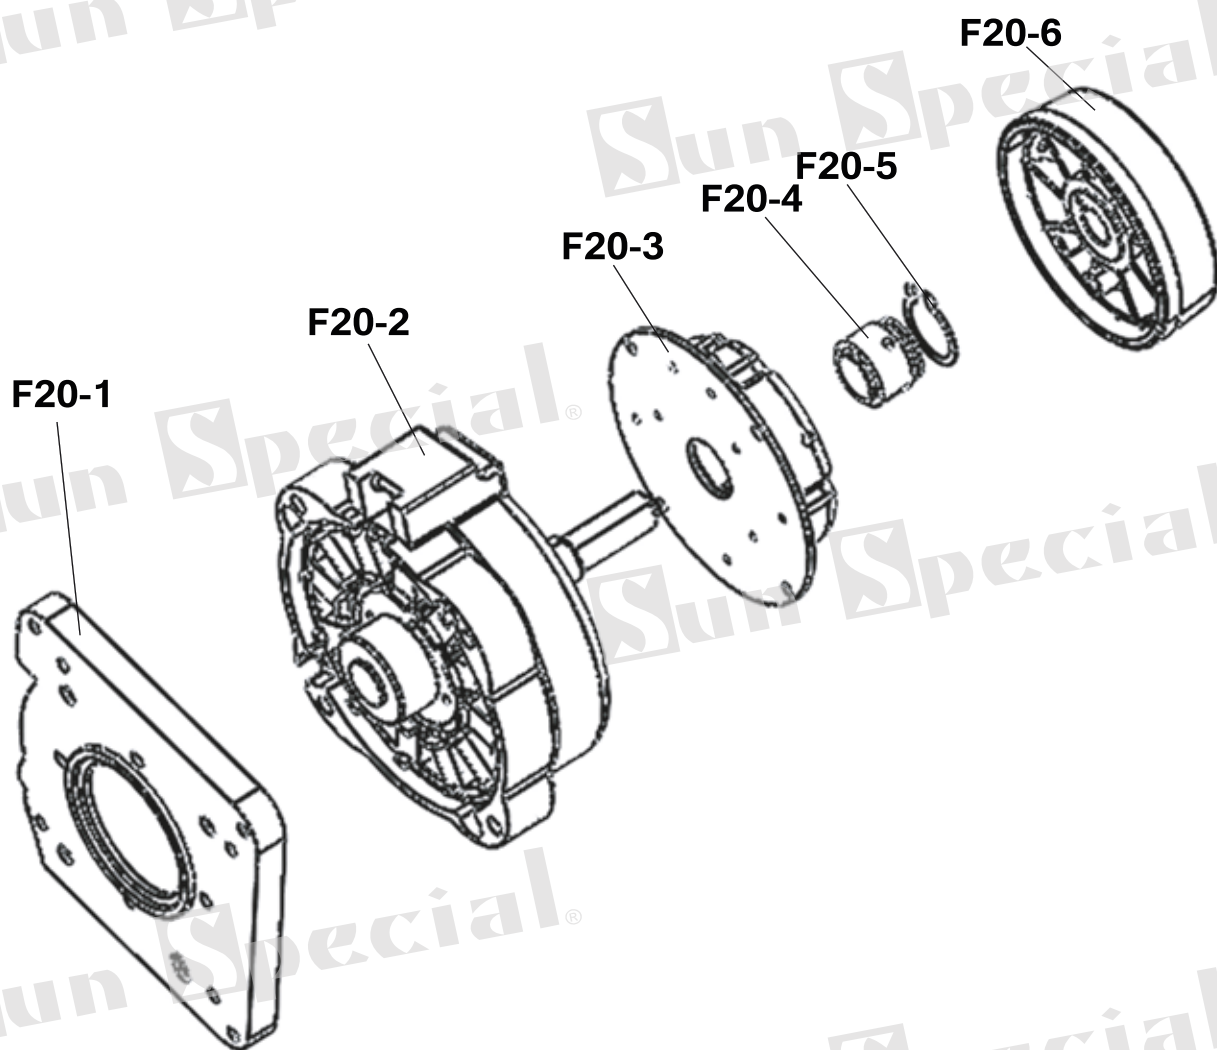


2.22 直驱电机结构 ESDD® MOTOR COMPONENTS


序号 PEF NO	件 号 PART NO	名 称 DESCRIPTION	数量 QTY	
			562A	562A-BD
1	F20-1	伺服电机连接板 Servo motor connection plate	0	1
2	F20-2	伺服电机 Actuating motor	0	1
3	F20-3	电路板组件 Circuit board components	0	1
4	F20-4	轴套 Shaft sleeve	0	1
5	F20-5	开口挡圈 Split washer	0	1
6	F20-6	手轮 Hand wheel	0	1

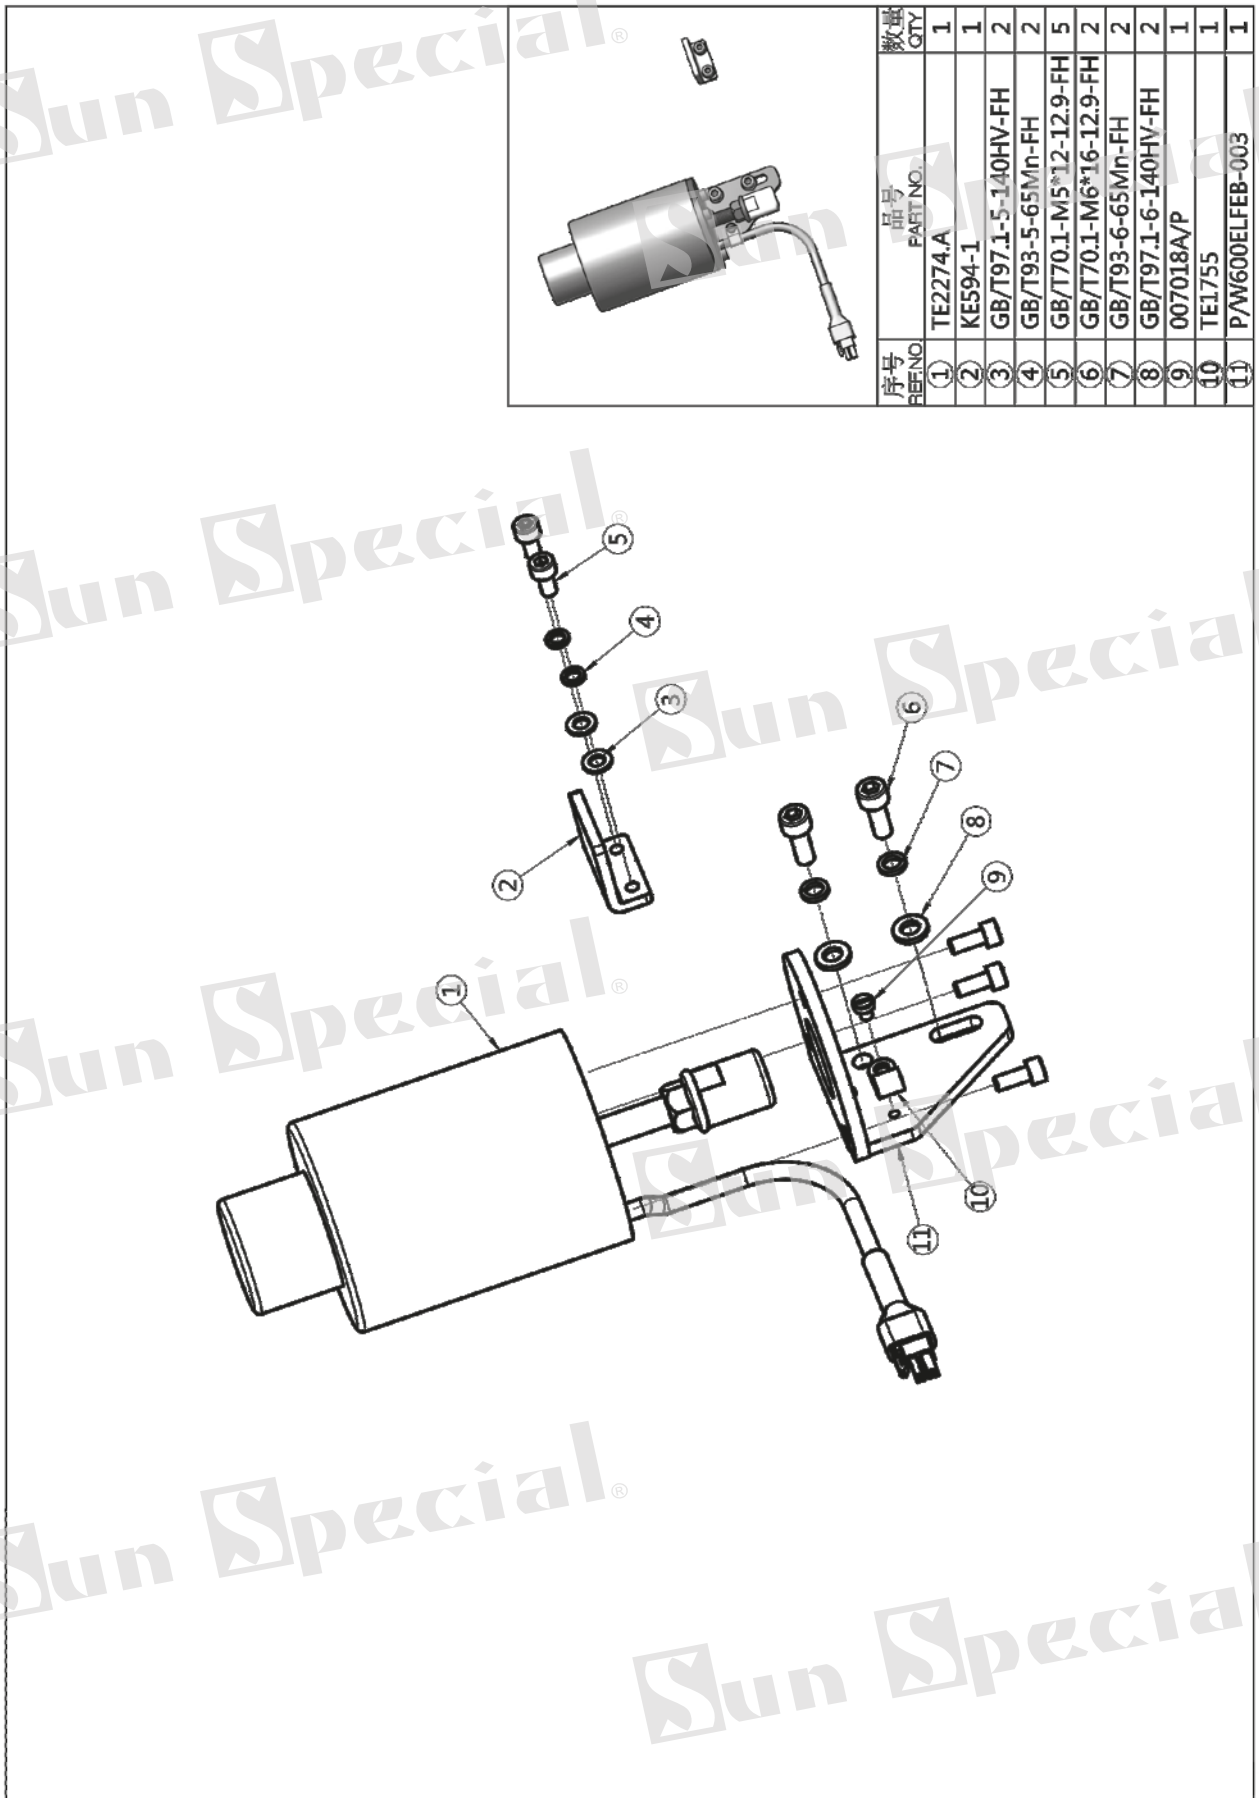


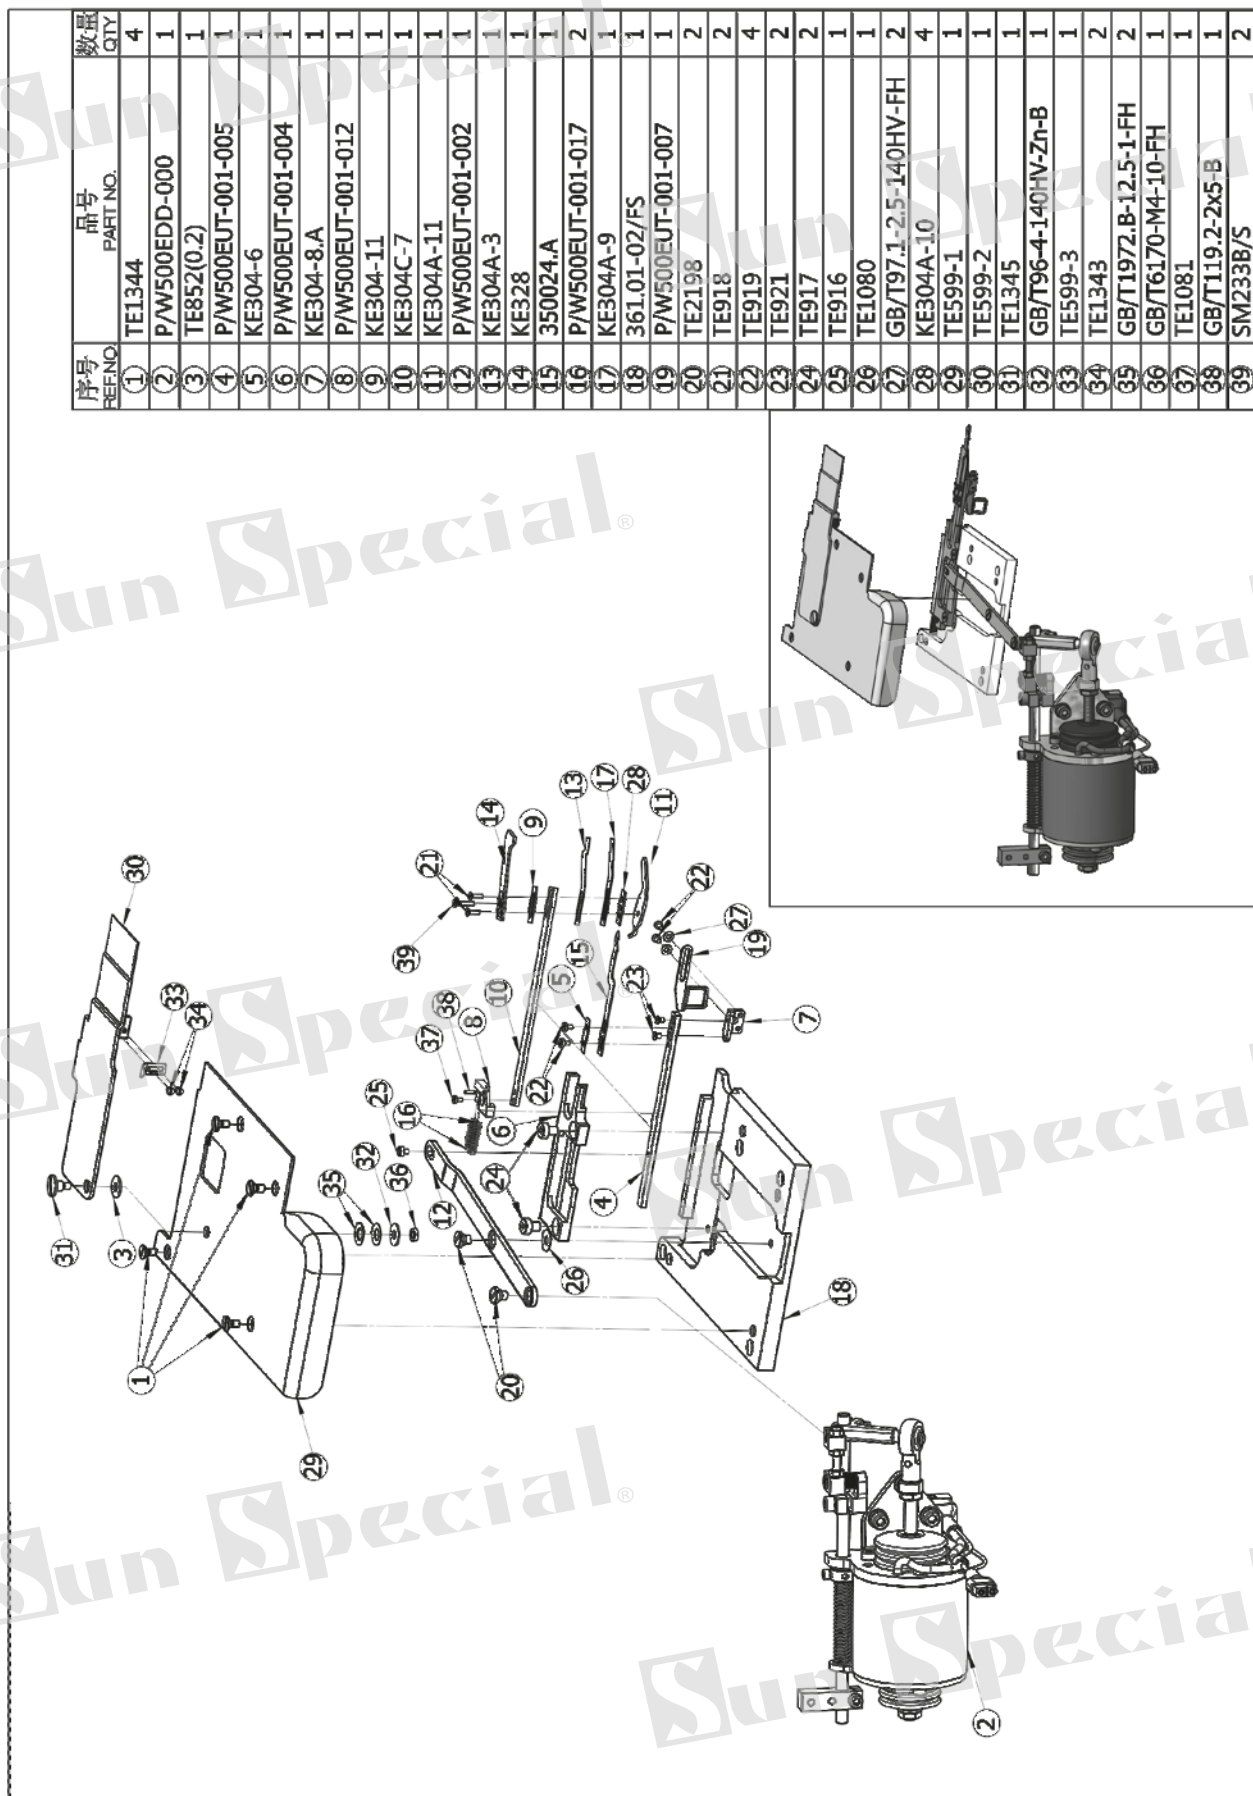


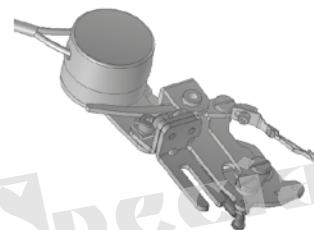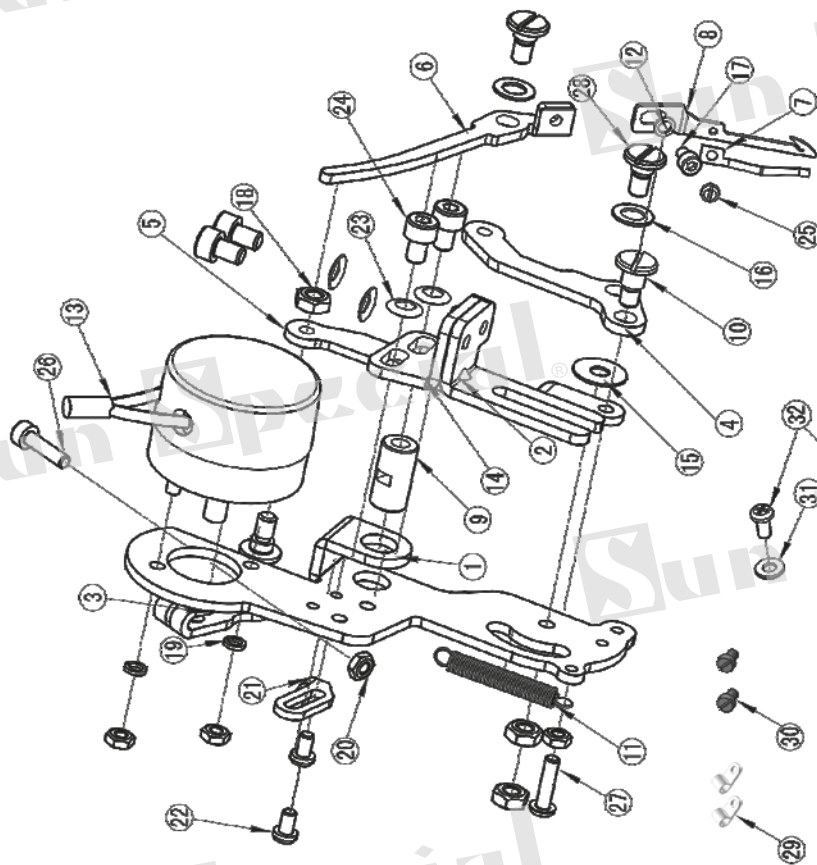


序号 REF.NO	品号 PART NO.	数量 QTY
1	P/W600EWPC-001	1
2	P/W600EWPC-003	1
3	P/W600EWPC-004	1
4	P/W600EWPC-005	1
5	P/W600EWPC-007	1
6	P/W600EWPC-008	1
7	P/W600EWPC-009	1
8	P/W600EWPC-010	1
9	P/W600EWPC-011	1
10	P/W600EWPC-013	1
11	P/W600EWPC-014	1
12	GB/T848-3-140HV-Zn-B	1
13	TE2144	1
14	P/W600EWPC-002	1
15	P/W600EWPC-018	1
16	P/W600EWPC-015	2
17	GB/T70.1-M3*4-12.9-FH	1
18	GB/T6170-M4-10-FH	4
19	GB/T93-3-65Mn-FH	2
20	GB/T6170-M3-8-FH	4
21	P/W600EWPC-006	1
22	SM330/S	2
23	GB/T1972.8-8-FH	4
24	GB/T70.1-M4*6-12.9-FH	4
25	110034	1
26	GB/T70.2-M3*12-12.9-FH	1
27	GB/T70.2-M3*12-12.9-FH	1
28	P/W600EWPC-012	3
29	ACC-2.5	2
30	TE806/P	2
31	GB/T97.1-4-A140	2
32	007020A	2

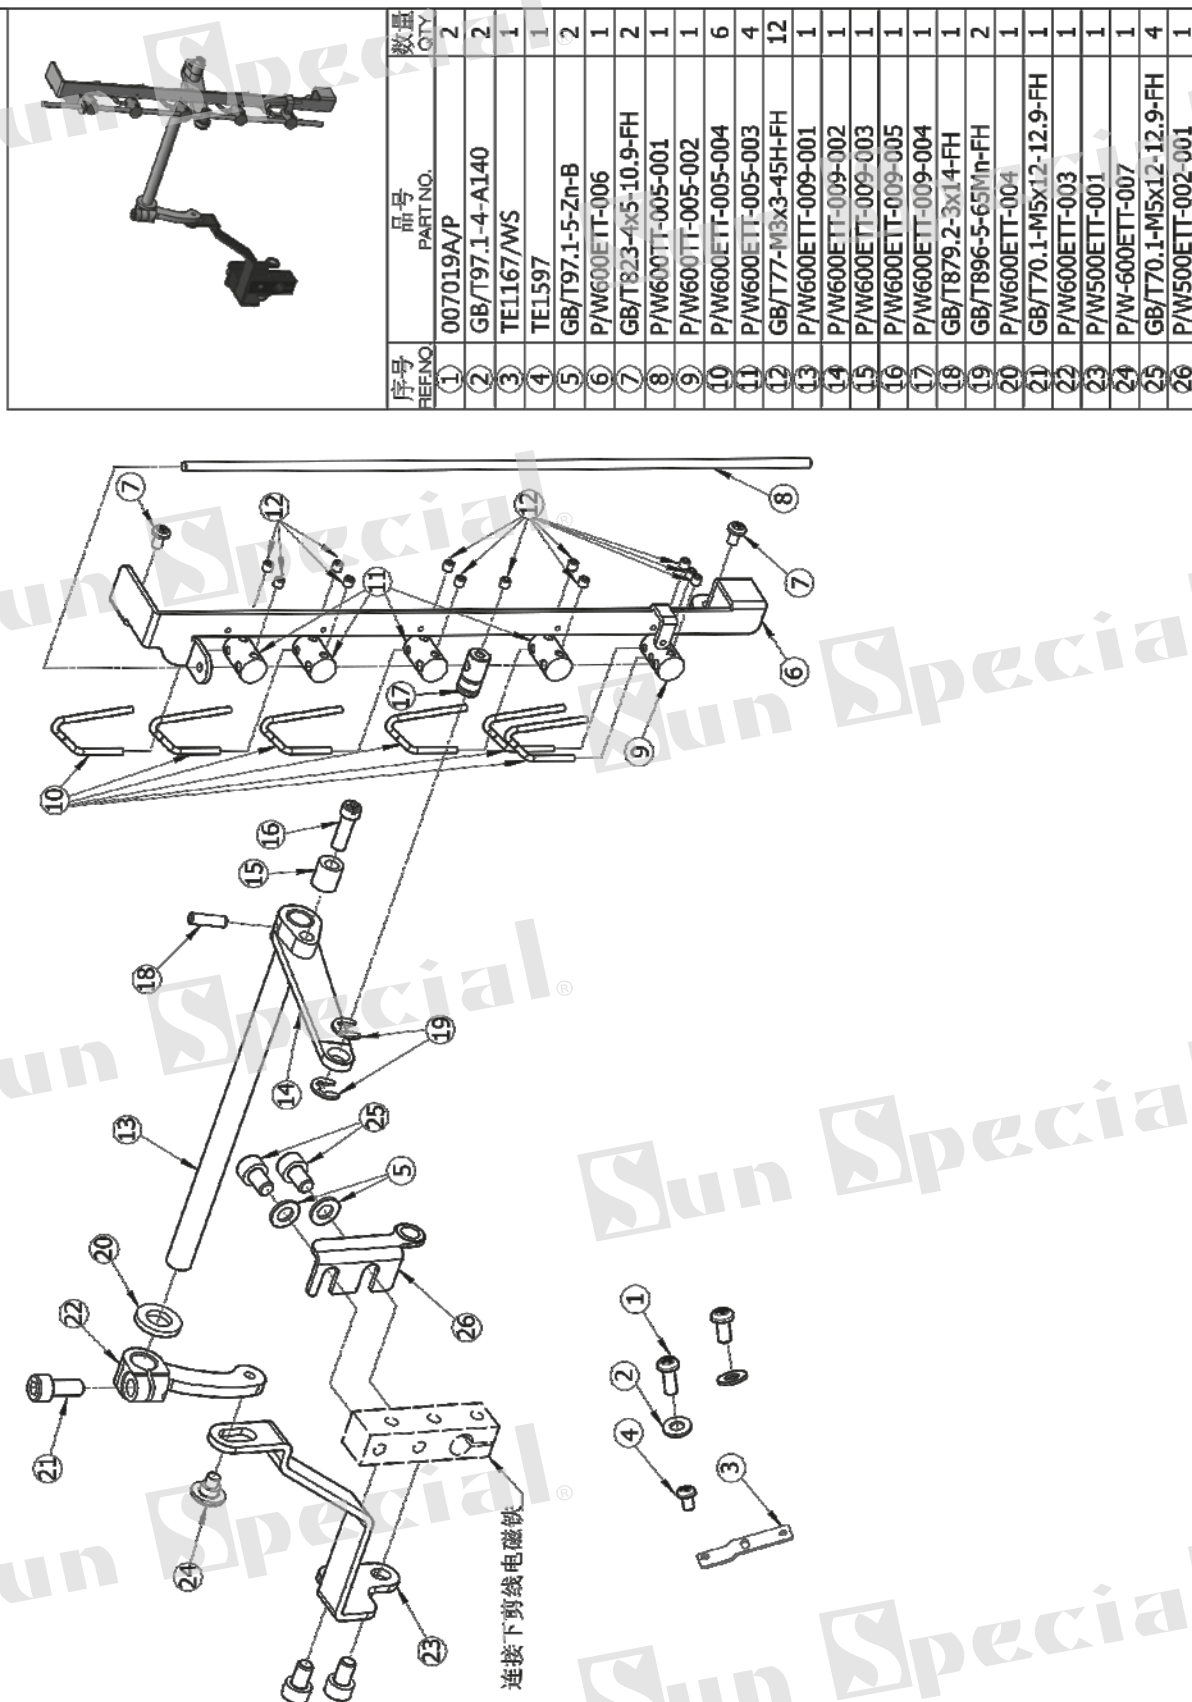

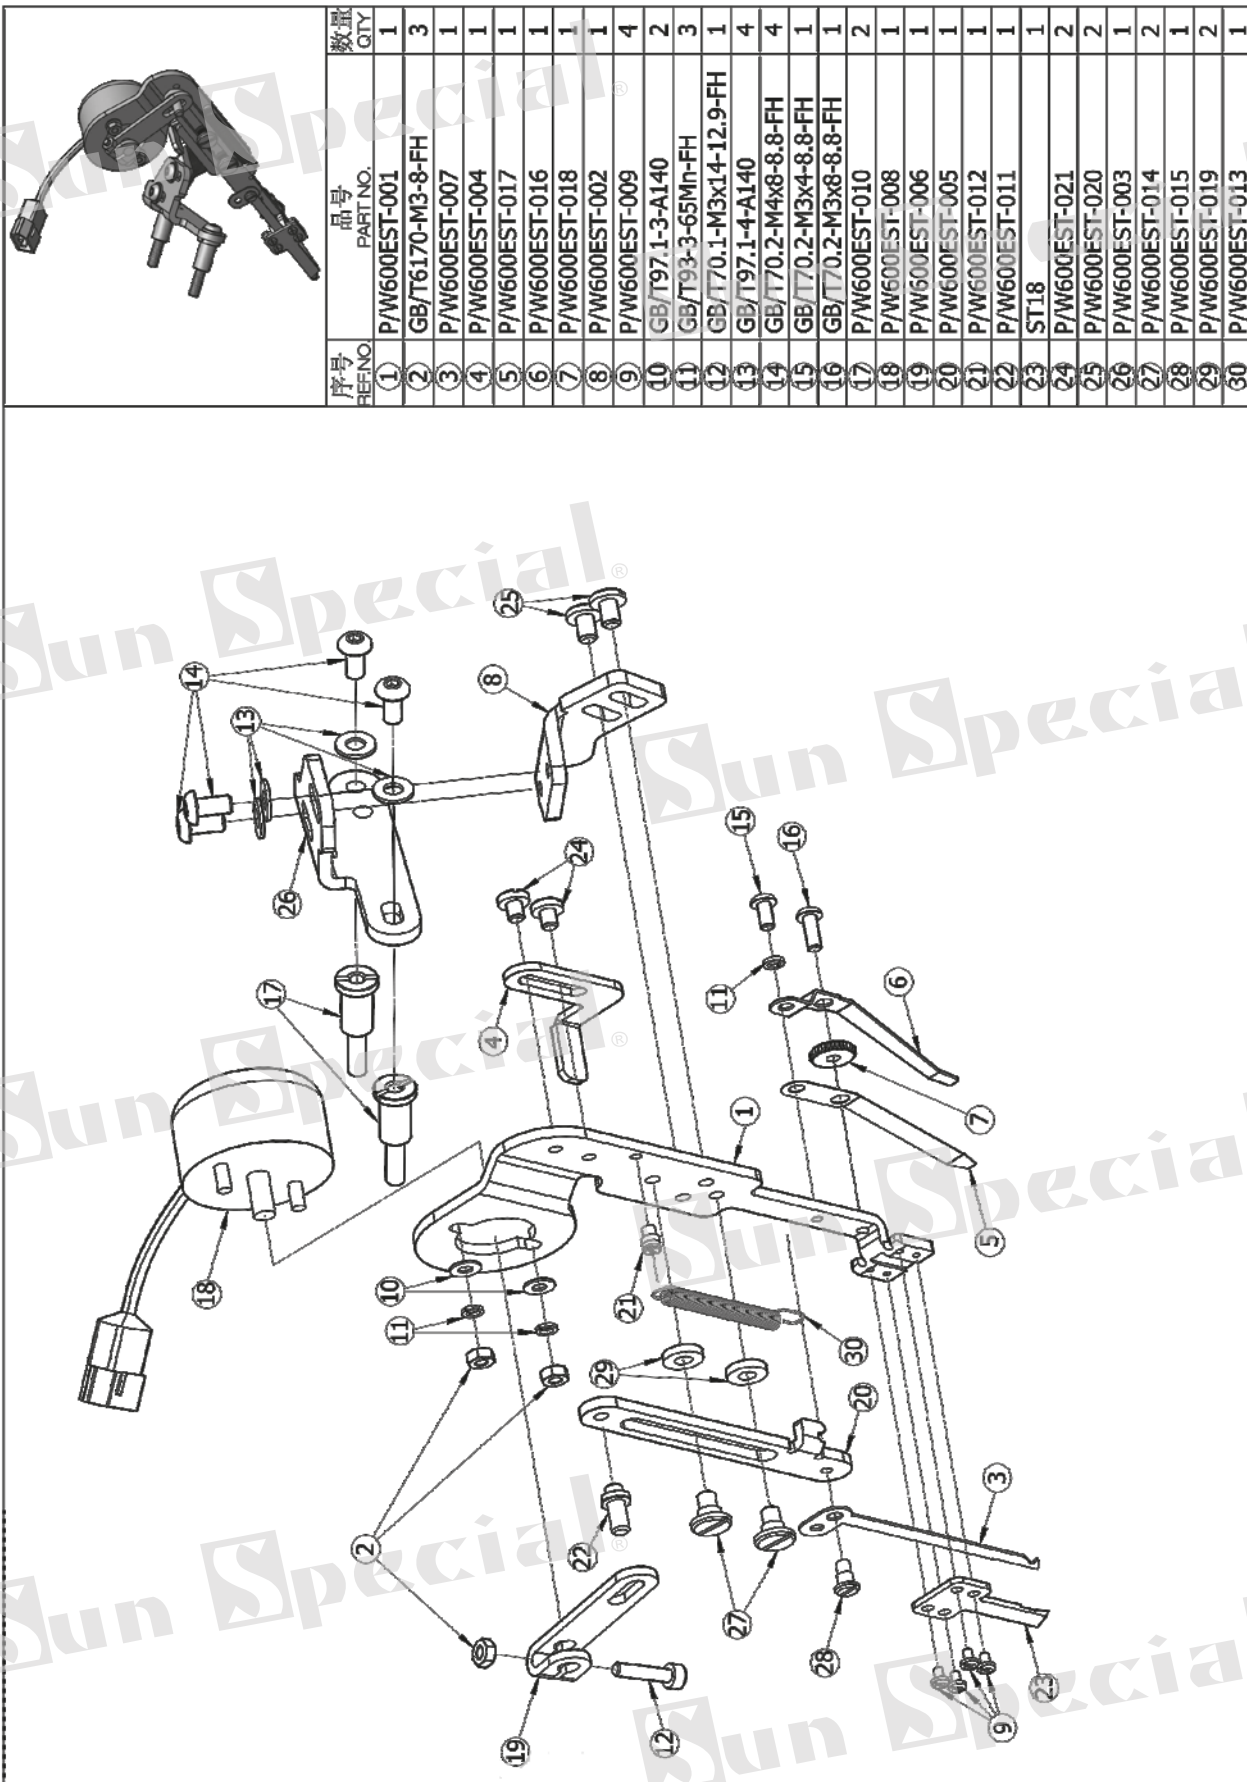

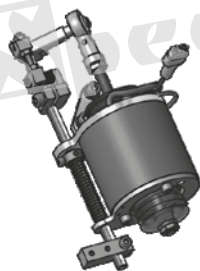

序号 REF.NO.	品号 PART NO.	数量 QTY
①	TE2524	1
②	TE2881	1
③	ACC-2	1
④	007018A/P	1
⑤	GB/T70.1-M6*16-12.9-FH	3
⑥	GB/T93-6-65Mn-FH	3
⑦	GB/T97.1-6-140HV-FH	3
⑧	GB/T70.1-M5*12-12.9-FH	8
⑨	Y/VC2700EDD-003	1
⑩	TE2197-2	1
⑪	TE2197-4	1
⑫	GB/T77-M5*45-45H-FH	1
⑬	GB/T6172.1-M5-04-FH	3
⑭	TE2197-3	1
⑮	P/W600PUT-001-007	1
⑯	TE1176-6	1
⑰	GB/T70.1-M6*20-12.9-FH	1
⑱	TE2197-5	1
⑲	GB/T70.1-M4*5-12.9-FH	1
⑳	201665/BT	1
㉑	TE2246.A	1
㉒	TE2197-6	1
㉓	TE2880	1
㉔	TE2197-7	1

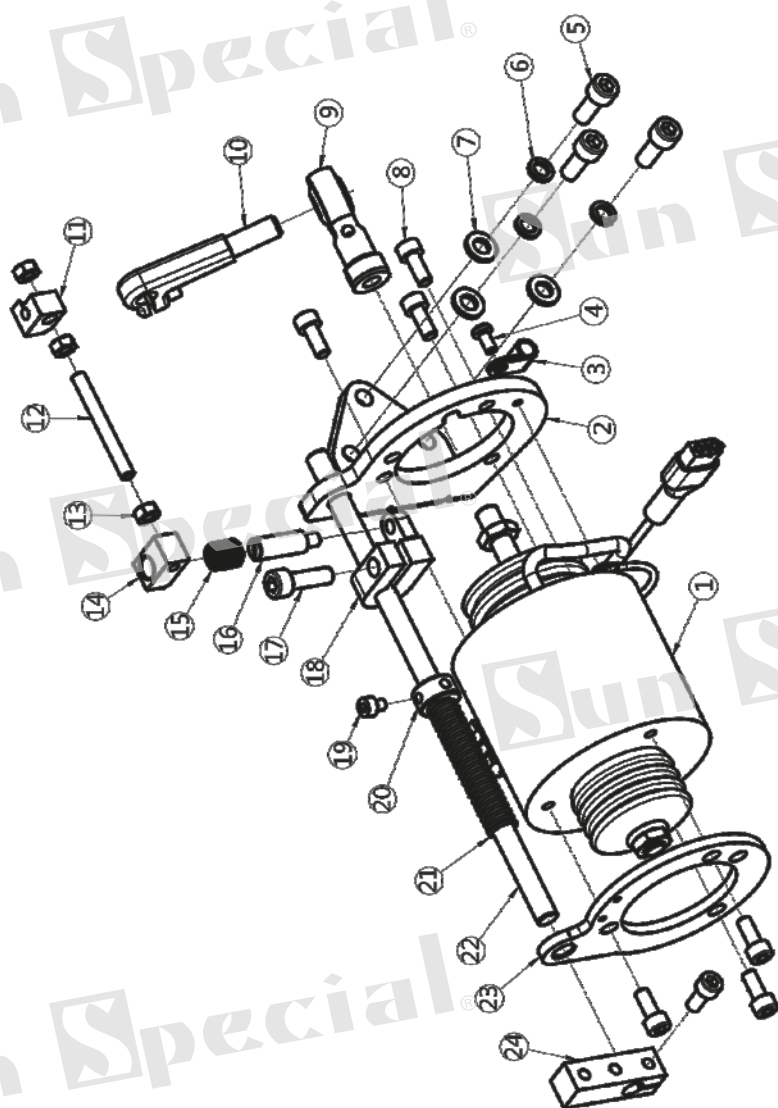

2.24 针位互换清单 GAUGE PARTS LIST

CONVERSION CHART										
规格件表	MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAINFEED DOG	KIFF. FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
机型	规格	224	257517-24	257517B24	主送料牙	差动送料牙	压脚	绷针	弯针	针号
V20-01CB V20-01CB/M		232	" 32	" 32	257206-16F	257258-16F	" 32			
		240	" 40	" 40			" 40			
		248	" 48	" 48			" 48			
		256	" 56	257517B56	257207-16F	257259-16F	257517B56	25756S	257550	
		264	" 64	" 64			" 64			
		348	257518-48	257516B48	257206-16F	257258-16F	257461-48			
V20-02BB V20-02BB/M		356	" 56	257518B56	257206-16F	257258-16F	" 56			
		364	" 64	" 64			" 64			
		224	257517-24	257029B24	257214-16F	257280-16F	257317A24			UY128GAS#11
		232	" 32	" 32			" 32			
		240	" 40	257030B40	257215-16F	257281-16F	257318A40			
		248	" 48	" 48			" 48	25756S	257550	
		256	" 56	257032B56	257216-16F	257282-16F	257319A56			
		264	" 64	" 64			" 64			
		348	257518-48	257031B48	257215-16F	257215-16F	257320A48			
		356	" 56	257033B56	257216-16F	257282-16F	257321A56			
		364	" 64	" 64			" 64			

2.24 针位互换清单 GAUGE PARTS LIST

规格件表

CONVERSION CHART

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAINFEED DOG	KIFF, FEED DOG	PRESSER FOOT	SPREADER	LOOPER	NEEDLE
机型	规格	针夹	针板	主送料牙	差动送料牙	压脚	绷针	弯针	针号
V20-03DC V20-03DC/M	240	257517-40	257087B40	257206-16F	259200-16F	257467-40	25756S	257550	UY128GAS#11
	248	" 48	" 48			" 48			
	256	" 56	257089B56	257207-16F	259253-16F	" 56			
	264	" 64	" 64			" 64			
	348	257518-48	257088B48	257206-16F	259200-16F	257468-48			
	356	" 56	257090B56	257207-16F	259253-16F	" 56			
	364	" 64	" 64			" 64			

SAC: 0800 660 6000

Prazo de Validade:
Indeterminado

Importado e Distribuído por:



Sun Special

Qualidade e Tecnologia

CNPJ: 05.013.910/0001-22

Rua da Graça, 577 - Bom retiro

São Paulo, SP

Fone: 11-3334-8800

www.sunspecial.com.br

País de Origem: China